HOMCOM

IN250500128V01_UK

820-465V70



Heater,220-240V~50-60Hz,1500W

This product is only suitable for well insulated spaces or occasional use.

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

EN

INTRODUCTION

- Before using your new heater, please carefully read through the following instructions. KEEP THIS BOOKLET IN A SAFE PLACE SO THAT YOU MAY CONSULT IT LATER.
- After removing the packaging, make sure that the appliance is in good condition.
- The packaging materials may contain plastic, nails etc., which may be hazardous and therefore should not be left within the reach of children.

IMPORTANT SAFETY INFORMATION

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- **CAUTION** - Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
-  **WARNING:** In order to avoid overheating, do not cover the heater.
- The heater must not be located immediately below a socket-outlet.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Do not use this heater if it has been dropped;
- Do not use if there are visible signs of damage to the heater;
- Use this heater on a horizontal and stable surface, or fix it to the wall, as applicable.
- **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- **WARNING:** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet


EN

- Installation MUST be carried out by a qualified electrician.
- Avoid installation behind a door.
- Use only the voltage specified on the rating plate of the heater.
- Do not cover or restrict airflow to the inlet or exhaust grilles in any manner as the appliance may overheat and become a fire risk (for Fan Heaters).
- Do not cover grilles, block entry or exhaust of airflow by placing appliance against any surface. Keep all objects at least 1 metre from the front and sides of the appliance. With exception of appliances designed for wall-mounting, maintain a 1 metre gap from the rear of the unit as well.
- **WARNING: FIRE RISK EXISTS IF THE HEATER IS COVERED BY OR POSITIONED CLOSE TO CURTAINS OR OTHER COMBUSTIBLE MATERIALS.**
- Do not place appliance close to a radiant heat source.
- Do not operate in areas where gasoline, paint or other flammable liquids are used or stored.
- This appliance heats up when in use. To avoid burns, do not let bare skin touch hot surfaces. Switch off and use handles where provided when moving.
- Do not use the appliance to dry clothes.
- Do not leave the appliance unattended whilst in use.
- Do not insert or allow foreign objects enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
- Do not immerse in liquid or allow liquid to run into the interior of the appliance, as this could create an electrical shock hazard.
- Do not use this appliance on a wet surface, or where it can fall or be pushed into water.
- Do not reach for an appliance that has fallen into water. Switch off at supply and unplug immediately.
- Do not operate any appliance with a damaged cord, plug or after the appliance malfunction or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical or mechanical adjustment, service or repair before further use.
- Do not operate appliance with wet hands.
- This appliance is intended for household use only and not for commercial or industrial use.
- Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
- A common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum-cleaning air vents and grilles, where available.
- Do not use this appliance in a window as rain may cause electric shock.
- Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.

- Do not connect the appliance to the mains source until it has been installed in its final location and adjusted to the position it will be used in.
- This appliance is not intended for use in bathrooms, laundry or similar locations which may be exposed to water, moisture or humidity.
- Switch off the appliance, then use handles (where provided) to change its position.
- Do not operate with the cord coiled up as this could cause a build up of heat, which could pose a hazard.
- The use of an extension cord with this appliance is not recommended.
- Do not remove the power plug from the socket by pulling the cord – grip the plug instead.
- Always unplug appliance when not in use.
- Do not allow cord to come in contact with heated surfaces during operation.
- Do not run cord under carpeting, throw rugs or runners etc. Arrange cord away from areas where it is likely to be tripped over.
- Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that the cord has been fully removed from any cord storage area before use.
- Do not store appliance in a box or closed space until it has cooled down sufficiently.
- Do not use this appliance with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the appliance is covered or positioned incorrectly.
- Do not use this appliance outdoors, or on wet surfaces. Avoid spilling liquid on the appliance.

OPERATION

CONTROL PANEL VIEW

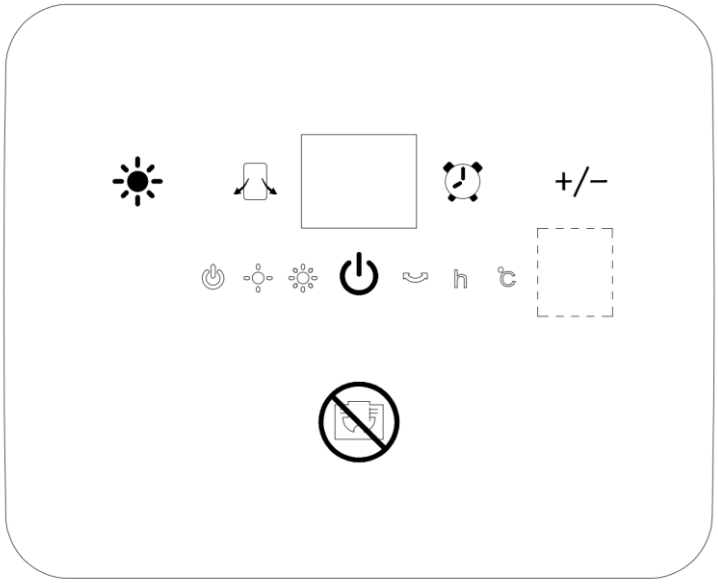

EN

OPERATION

1. Before inserting the plug into an electrical outlet, make sure that the electrical supply in your area matches that on the rating label on the unit.
2. Carefully remove the heater from the plastic bag and the carton.
3. Place the heater on a firm level surface
4. Setting the master button to “O”.plug the cord set into a 220-240V~AC electrical outlet. Turnning the master button “-” position, with “BEE” sounds the light is on.
5. The unit will display the current Room temperature and “ ” light with RED color .
6. And then by pressing the “ ”button become BLUE color, the unit will blow the cold air. And the fireplace will light on.
7. Upon pressing the “ +/- ”button, the“ ℃ ”light up, start set the suitable temperature(the highest temperature you can set until to 49℃), when the setted temperature is higher then room temperature, the unit will start one heat setting, and at this time the “ ”will light up with BLUE color. If continue pressing “+/-” the setted temperature will be even higher. The unit will start totally 2 heat settings. At this time the “ ”will light up with BLUE color. Once continue pressing “+/-” the setted temperature reached 49℃, then the temperature restart from 10℃.
8. Press button “ ” one time pressing is in low heat setting and the “ ”will light up with BLUE color. Two times pressing is in high heat setting and the “ ” will light up with BLUE color. When pressing this button for third times, it will come back with only cool air blowing mode.
9. By pressing “ ”button with the “ ” light up, you can make the heater with or without oscillation.
10. By pressing “ ”button with the“ h ”light up, you can set the timer from 1-24 hours .
11. When you want to turn off the heater, you can press“ ”button, this time the symbol “fan blade”will shining, and at the meaning time, all the heating will turn off and only fan blowing, after blowing 30s,the heater will cut off only showing the room temperature with the“ ”light become RED color. And the fireplace will light off.

OSCILLATION BUTTON

This appliance also have oscillation function. To switch the function on, press the “ ” button with the “ ” light up. To stop it, press the oscillation button again with “ ” light turn off.

TIMER FUNCTION

This function will work in any mode. The timer function allows you to set the length of operation from 1 hour to 24 hours. Pressing the “ ”button increase the length of

operation by 1 hour each times the button is pressed. Once the timer has been set the timer will count down the hours in 1 hour by 1 hour ,showing on the display the remaining operating time until the heater will turn itself off. Pressing the timer button once more after the display reflects 24 hours will reset the heater to continuously running.

THERMOSTAT INSTRUCTIONS

1. To adjust temperature, press the " +/- " to increase the desired temperature Max 49℃ and continue press " +/- " to reset from 10℃ to 49℃.
2. When the air temperature drops 2 degree below the set temperature, the heater will start heating with 750W.
3. When the air temperature drops 4 degree below the set temperature ,the heater will start heating with 1500W.
4. When the air temperature high 1 degree or ≥ the set temperature, the heater will blow the cold air
5. Temperature can setting from 10 degree to 49 degree.

SAFETY TIP-OVER SWITCH

The appliance have safety tip-over switch for safe protected. Make the user away from fire and other damage.

OVERHEAT PROTECTION

This heater is protected with an overheat protection that switches off the appliance automatically in case of overheating. For example: due to the total or partial obstruction of the vents. In this case, unplug the appliance, wait about 30 minutes for it to cool and remove the object which is obstructing the vents. Then switch it back on as described above. The appliance should now operate normally. If the problem persist, please contact Customer Service for assistance.

CLEANING & MAINTENANCE

- Before undertaking any cleaning or maintenance on the appliance, disconnect it from the power supply.
- For cleaning it is recommended to use a soft moist rag and neutral detergent. Do not use an abrasive cloth or devices which could affect the appearance of the appliance. Check that the hot air outlet and the ventilation inlet are free of dust and dirt.
- During cleaning, be careful not to touch the heating elements.
- To open the filter on the back for cleaning, press the top of plastic net at back.
- In case of breakdown and/or poor functioning of the appliance, disconnect the appliance from the power supply and contact an authorised repairer.

EN

SPECIFICATIONS

Model	Voltage	Frequency	Power
HPC-D1510YL	220-240V~	50-60Hz	1500W

DISPOSAL



Meaning of the crossed-out wheeled dustbin:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local council for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

If you have any questions, please contact our customer care center.
Our contact details are below:

0044-800-240-4004

enquiries@mhstar.co.uk

IMPORTER ADDRESS:
MH STAR UK LTD
Unit 27, Perivale Park,
Horsenden lane South
Perivale, UB6 7RH
MADE IN CHINA

EN

Information requirements for electric local space heaters

Model identifier(s):820-465V70(HPC-D1510YL)

Item	Symbol	Value	Unit	Item	Unit
Heat output				**Type of heat output/room temperature control (select one)**	
Nominal heat output	P_{nom}	1.500	kW	Single stage heat output and no room temperature control	[no]
Minimum heat output (indicative)	P_{min}	0.738	kW	Two or more manual stages, no room temperature control	[no]
Maximum continuous heat output	$P_{max.c}$	1.461	kW	With mechanic thermostat room temperature control	[no]
Power consumption				With electronic room temperature control	[no]
In off mode	P_0	N/A	W	Electronic room temperature control plus day timer	[yes]
In standby mode	P_{sm}	0.55	W	Electronic room temperature control plus week timer	[no]
In idle mode	P_{idle}	0.55	W	**Other control options (multiple selections possible)**	
In network standby	P_{nsm}	N/A	W	Room temperature control, with presence detection	[no]
				Room temperature control, with open window detection	[no]
Standby mode with display of information or status			[no]	Distance control option	[no]
Seasonal space heating energy efficiency in active mode	$\eta_{s,on}$	92.5	%	Adaptive start control	[no]
				Working time limitation	[yes]
				Black bulb sensor	[no]
				Self-learning functionality	[no]
				Control accuracy	[no]
Contact details:	IMPORTER ADDRESS: MH STAR UK LTD Unit 27, Perivale Park, Horsenden lane South Perivale, UB6 7RH MADE IN CHINA				

Aosom