Outsunny


IN250900354V01_UK

846-270V70

Gas Barbecue

User manual - Gas Barbecue

KB4015 / KB4016

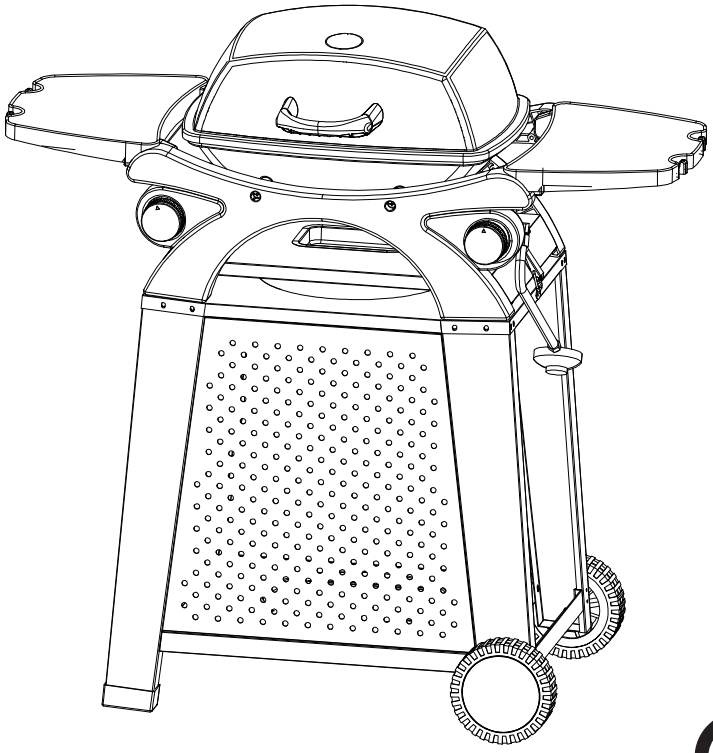

CE

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

INSTRUCTION MANUAL

Table of contents

1. Introduction **3**
1.1 Intended use 3
1.2 Product overview 3
1.3 Product specifications 4
1.4 Other features 4
1.5 Contents of package 5

2. Safety **6**
2.1 General 6
2.2 Persons 7
2.3 Use 7
2.4 Gas 8

3. Instructions for use **8**
3.1 Assembly 9
3.2 Connecting the product to the LP gas cylinder 16
3.3 Checking for leaks 17
3.4 Using the product 17
3.5 Tips for grilling 18
3.6 Disconnecting the gas cylinder after use 18

4. Troubleshooting **19**

5. Maintenance and cleaning **21**

6. Storage **22**

7. Disposal and recycle **22**
7.1 Disposal 22

8. Symbols **23**

9. CE- DECLARATION OF CONFORMITY **24**

10. Disclaimer **24**

1. Introduction

Thank you for choosing a KitchenBrothers product! Please always follow the instructions for safe usage.


1.1 Intended use

A gas grill is designed for grilling food in an outdoor environment. The product uses gas as an energy source to generate the heat needed needed to grill food.


The supplier is released from liability for any injury or damage caused by using the product beyond its intended use. Any modification of the product may affect your safety and warranty.

1.2 Product overview

BARBECUE

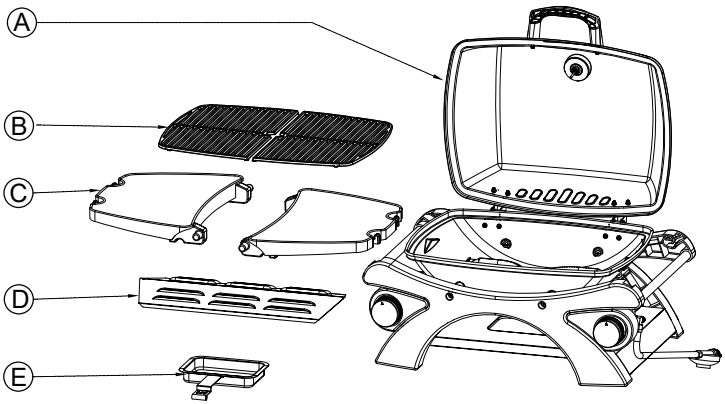

TROLLEY (KB4015)

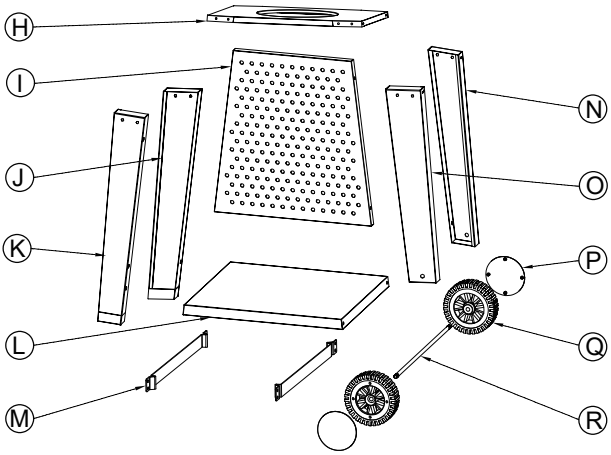

GASTANK (not included)

1. Regulator: Reduces gas pressure.
2. Lever of gas valve:
   - Position 9 o'clock: Gas off and connect/disconnect gas cylinder.
   - Position 12 o'clock: Gas on.
3. Release knob: Disconnect regulator from gas valve.
4. Gas bottle with gas valve.
5. Gas hose with hose clamp (supplied).

1.3 Product specifications

Dimension	Tabletop model: 43 x 46.2 x 35 cm With trolley: 38 x 46.2 x 102 cm
Weight	Tabletop model: 12.3 kg With trolley: 22.5 kg
Grill surface	60 x 42cm
Required fuel	Gas (LPG)
Ignition	Piezo (push and turn)
Max load capacity	2 kg on the side tables
Overheat protection	No

Required gas bottle (not included)

Type of gas	LPG (propane or butane)
Volume of gas bottle	5-11l
Max. inlet pressure	28-30 mbar
Max. inlet flow rate	Propane 4.4 L/min; Butane 3.4 L/min
Injector size	0.66 mm
Cylinder capacity limit	No

1.4 Other features

- Two powerful gas burners for grilling temperatures up to 350 degrees.
- Simple piezo ignition.
- Built-in thermometer to monitor temperature.
- Sturdy cast-iron removable grill grates that can go in the dishwasher.
- Removable side tables.
- Gas hose and regulator included.
- Specific to KB4015: Trolley with wheels to easily move the product around.

1.5 Contents of package


When receiving your shipment, make sure that the contents are consistent with the packing list. Notify your distributor of any missing items. If the equipment appears to be damaged, file a claim immediately with the carrier and notify your distributor at once, giving a detailed description of any damage. Save the damaged parts and packing container to substantiate your claim.

PACKING DETALS:TOTAL 2 BOXES

BOX-1/2

No.	Description	PCS
A	Top section / Grill housing	1
B	Barbecue grille	2
C	Side table	2
D	Flame cover	1
E	Grease collection tray	1

BOX-2/2

No.	Description	PCS
H	Top panel	1
I	Front panel	1
J	Front leg-right	1
K	Front leg-left	1
L	Baseplate panel	1
M	Strengthen beam	2
N	Back leg-right	1
O	Back leg-right	1
P	Wheel covers	2
Q	Rubber wheel	2
R	Axle	1
AA	 M6*12	8
BB	 M4*12	24
CC	 M10	2
DD		1
EE		1

2. Safety

WARNING!

Please ensure that the packaging is kept out of the reach of children! Risk of suffocation!

Before use, read the manual and safety information carefully. The supplier is not responsible for failure to follow the safety information on the use and handling of the product or damage to property or personal injury.

Always observe the following precautions when using 'the Gas Barbecue', hereinafter referred to as 'the product'.

2.1 General

- If this is your first time using the product, it is important to read the manual and instructions carefully.
- If the product is malfunctioning, dropped or damaged, do not use the product and consult our customer service.
- Before each use, check the parts and accessories for damage or wear (cracks/breakage) that may adversely affect its operation and, if so, replace them with original or manufacturer-recommended parts and accessories.
- Do not use accessories not offered by the supplier. They may pose a danger to the user and damage the product.
- Use the product only for the purposes indicated in this manual.
- Do not disassemble, repair or restore the product. Doing so may cause damage to the product. For your own safety, these parts should only be replaced by authorized service personnel. Always send the product to a service center for repairs to prevent damage and personal injury.
- Be aware of the risks and consequences associated with improper use of the product. Misuse of the product may result in personal injury and damage to the product.
- Before first use, remove all packaging material and any stickers.
- The product becomes hot when in use. So be alert when touching the product!
- The product is only suitable for outdoor use. Do not use the product indoors.
- The product is designed and intended for private use. Do not use the product for commercial purposes.
- Keep the product away from heat, areas where the temperature is relatively high, and heat sources such as ovens.
- Do not place the product near (highly) flammable materials such as dry grass, bushes, paper, newspapers, clothing, towels, chemicals, etc. This may cause a fire!
- Do not move the product if it is on or has not yet cooled down.

- Due to residual heat, the product remains hot after use. Do not touch the hot surface. This may result in personal injury.

2.2 Persons

- For burns, immediately run lukewarm water over the affected body part. Do not stop to remove clothing and seek medical attention quickly.
- This product should not be used by children.
- The product may be used by young people over 16 years of age, provided they are properly supervised and instructed in the safe use of the product and understand the potential hazards.
- This product should not be used by people with physical or mental disabilities.
- Keep the product out of the reach of children.
- Keep the product out of the reach of pets and other animals.
- To prevent personal injury and damage to the product, do not allow anyone to lean against or climb on the product.

2.3 Use

- To avoid personal injury, never leave the product unattended when it is on and has not yet cooled down.
- The product becomes hot when it is on. Do not touch the hot surfaces. Do not use the product if you are (un)sensitive to heat.
- Always place the product on a flat, stable and non-flammable surface.
- Place the product at a safe distance from materials or fabrics: at least 2 meters above and 1 meter to the side.
- Place the product at a safe distance from combustible materials or substances: at least 8 meters.
- Grasp the product only by the integrated handle. Hot steam and hot smoke may escape if the lid is opened when it is still hot. Be alert, do not stand with your head above the lid when opening it.
- The side tables can also get hot. Be careful when touching them.
- We recommend always using oven mitts when opening the product to protect your hands and fingers.
- Use only food suitable for grilling.
- The product is not intended for drying or heating items.
- Do not put pots and pans on the product.
- Always use utensils or barbecue tools to empty and pick up food on the grill plates. The grill plates and food become hot and pose a fire and burn hazard.
- Do not place objects on or against the lid of the product. This can cause fire, personal injury or damage to the product.
- Do not place metal objects such as knives, forks, spoons and lids on the product, these can become hot. Be alert when touching these objects.
- Wait for the product to cool completely before moving or cleaning it.

2.4 Gas

- This product operates with gas. Do not use other types of fuel or accelerants with this product (e.g., charcoal, lighter fluid, lava rocks, gasoline, kerosene or alcohol). Use only gas as directed in the instructions.
- Always take extra care when igniting the product. Do not lean over the product and stay away from the cooking surface to prevent it from catching fire.
- If the flame goes out, re-light it immediately or shut off the gas supply from the gas cylinder.
- Always disconnect the product from the main gas cylinder after use and before storage.
- Check all connections for leaks after each filling of the cylinder or when using after a long period of time. Escaping gas can cause serious personal injury if inhaled or ignited.
- When using the product, keep fire extinguishing equipment within easy reach.
- Do not attempt to extinguish an oil grease fire with water. Use a Type B or C dry chemical fire extinguisher or extinguish with dirt, sand or baking soda.
- Never use an LP gas bottle with a damaged housing, valve, collar or base.
- Protect the gas cylinder and gas hose from direct sunlight and other heat sources (max. 50°C).
- Make sure the gas hose does not touch any hot part of the product.
- Make sure the gas hose is not twisted.
- Do not obstruct the ventilation openings of the cylinder compartment.
- Do not place the gas cylinder on the bottom shelf (trolley) as it is too close to the burner.
- After each use, close the valve on the gas cylinder by turning it clockwise and turn off the control knobs on the product by turning them fully clockwise.
- Store the gas cylinder outside, covered with a cap nut and safety cap.


3. Instructions for use

IF YOU SMELL GAS:


1. Shut off the gas supply.
2. Extinguish open flames.
3. Do not use electrical appliances.
4. Open the lid and ventilate the room.
5. Check the gas connections by applying soap solution to them and checking for air bubbles. Never use a flame to look for a gas leak!
6. If the odor persists, contact your gas supplier or the fire department immediately.

3.1 Assembly Installation Instructions


1 Flame cover Installation

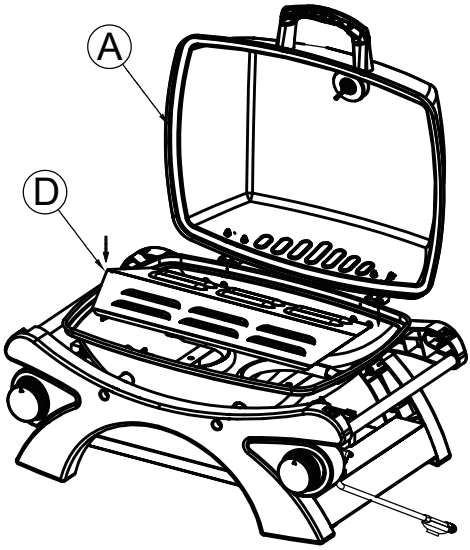


2 Barbecue grille Installation

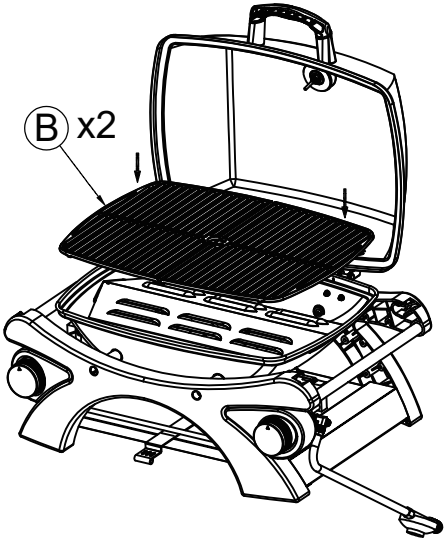


3 Side table installation

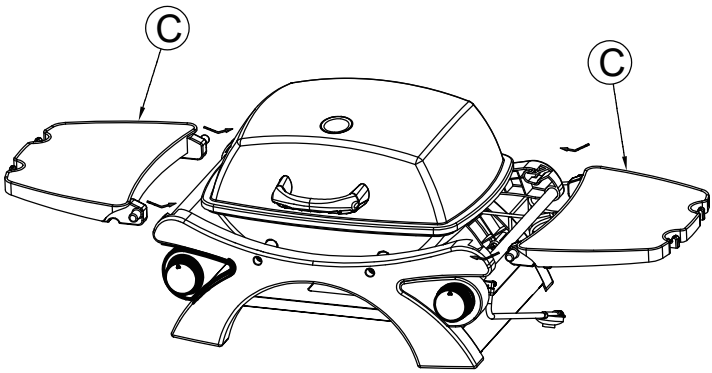

4 Grease collection tray installation

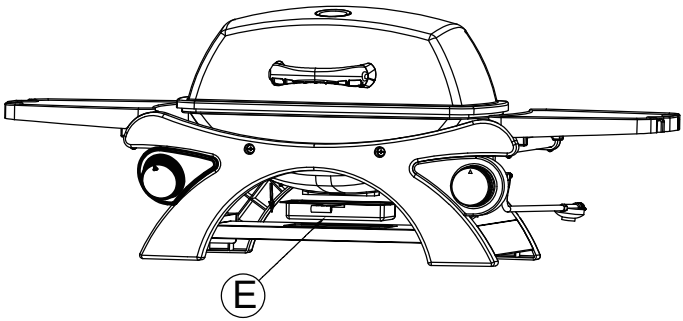


Grill part finished reference

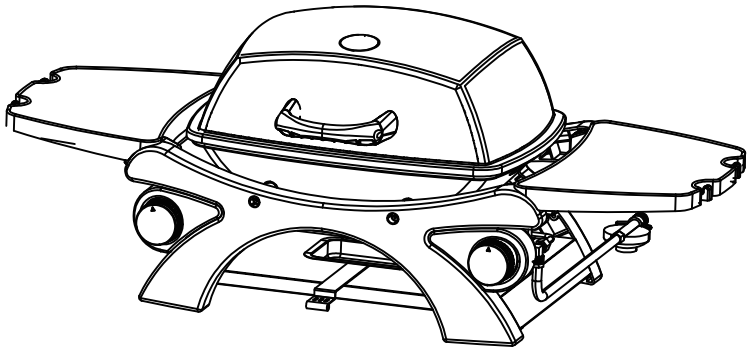


Trolley Installation


5 Legs installation

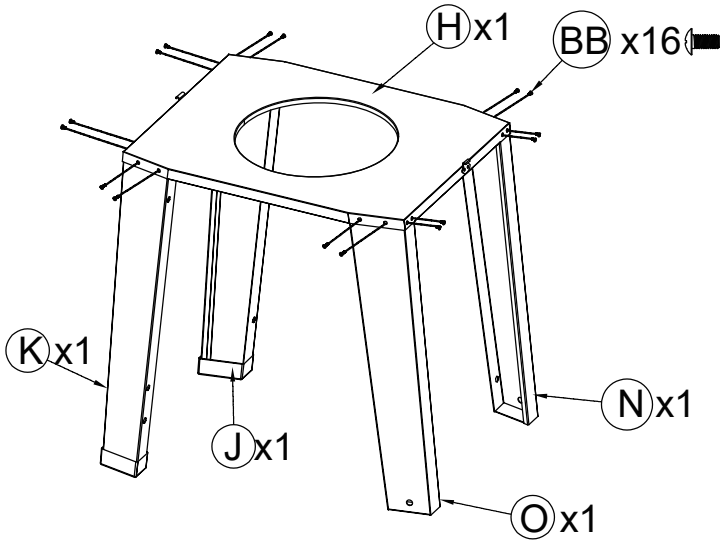


6 Front panel installation

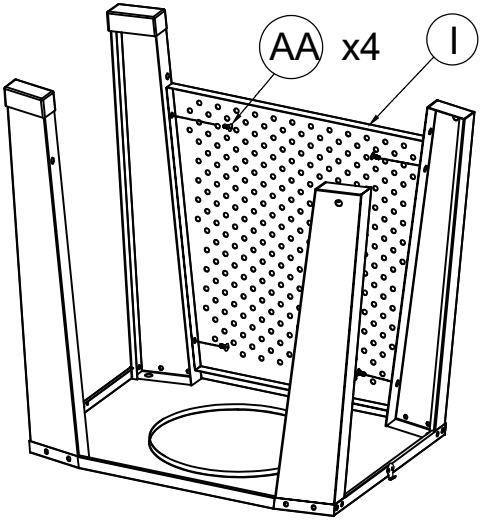

7 Baseplate panel installation

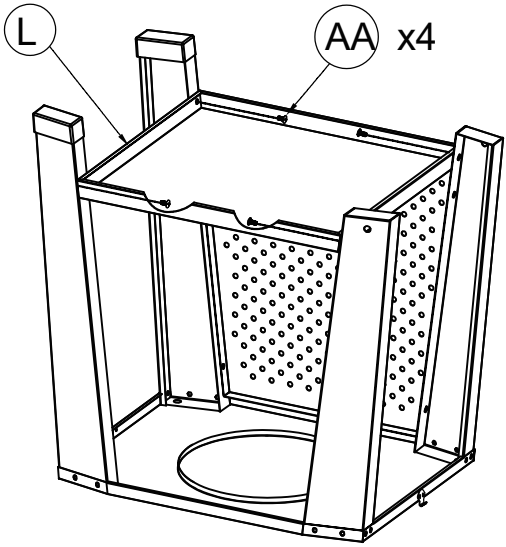


8 Strengthen beam installation

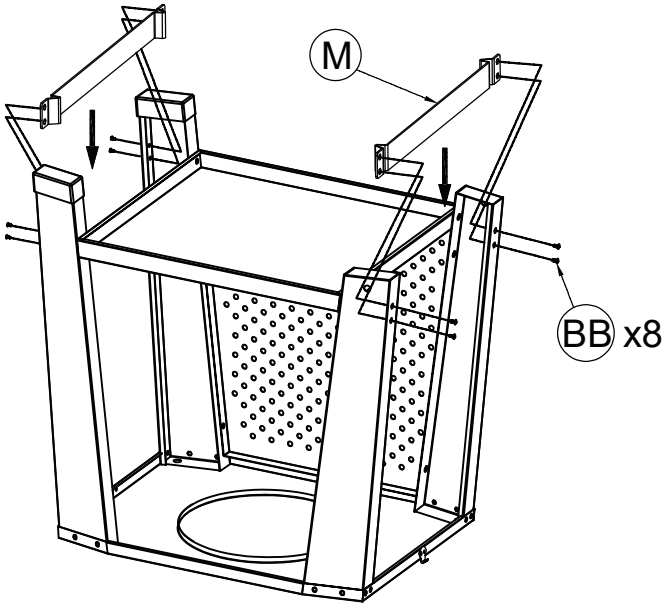


Trolley Installation


9 Wheels installation

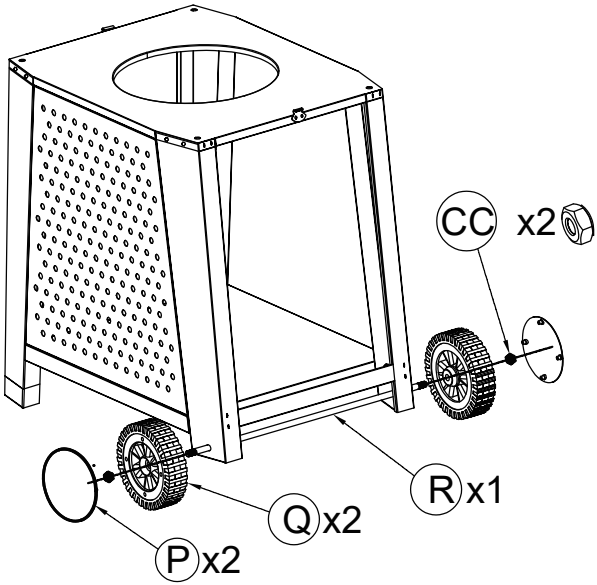


Trolley finished reference

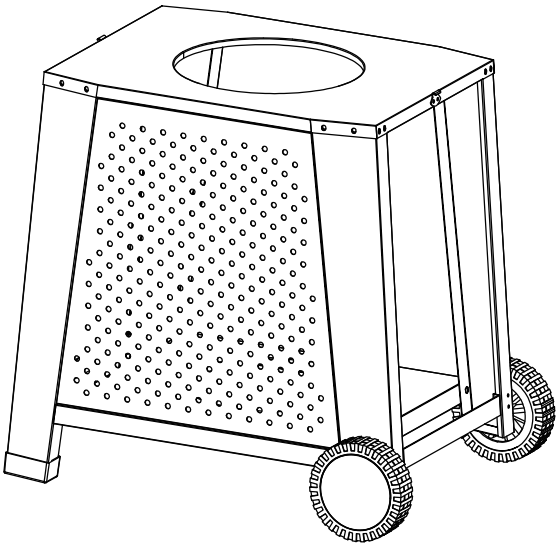

10 Grill+trolley installation

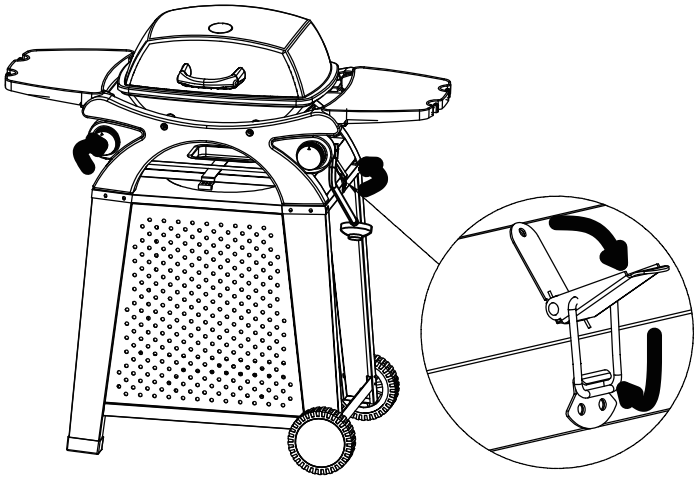

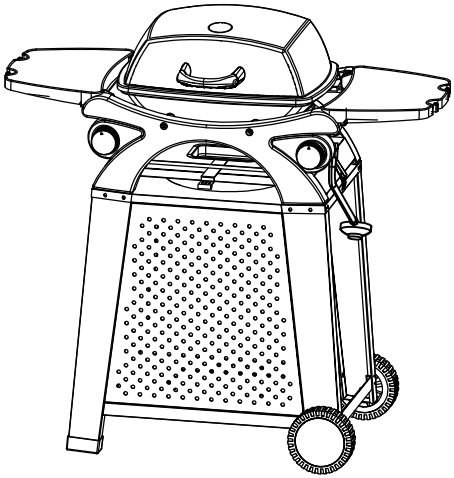


3.2 Connecting the product to the LP gas cylinder

ATTENTION!

◊ Do not place the gas container on the trolley directly under the product. Place the gas container at a safe distance from the product.

1. Place the product on a flat, stable and non-flammable surface, away from objects or substances:
2. Min. distance from materials or substances: 2 meters above and 1 meter sideways.
3. Min. distance from combustible materials or substances: 8 meters.
4. Check that both the product and the gas cylinder are in good condition and that the seal of regulator G1 is intact.
5. Connect the gas hose G5 to the gas bottle G4. Make sure the gas hose is not bent or under tension.
6. Turn the control lever G2 to the 9 o'clock position and push regulator G1 onto the valve of gas cylinder G4 until you hear a click.
7. Check the connection by pulling up regulator G1. It should not detach from the gas valve.

8. Check the connection between pressure regulator G1 and gas hose G5 to the valve and make sure they are tight.
9. Open the gas valve on the cylinder by turning the control lever G2 to the 12 o'clock position.
10. Always check for leaks after assembly and before using the product (see 3.3 " Checking for leaks"). Fire and injury hazard!
11. For the gas to flow, the control knobs on the product and the gas valve G2 on the gas cylinder must be opened (12 o'clock position). The spark is released when reaching the 1/4 position on a control knob.

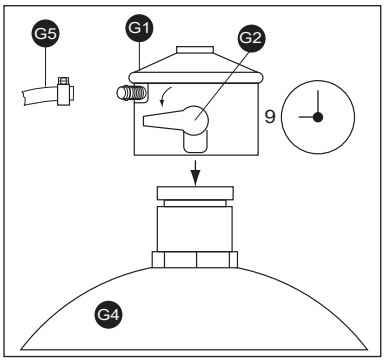

3.3 Checking for leaks

ATTENTION!

◊ Use a standard leak detection method to check that all connections are tight. Never use an open flame to check for leaks and do not rely on your hearing or smell.

1. Turn all control knobs to OFF.
2. Open the gas valve on the gas cylinder.
3. Brush a soapy solution over all gas system connections, including valve connections, hose connections and regulator connections.
4. If bubbles form anywhere, it means there is a leak. If the connection is not sealed, immediately close the gas valve by turning the control lever G2 to the 9 o'clock position.
5. Tighten the connection or replace the leaking part before using the product.
6. Repeat the leak test annually or whenever the gas cylinder is repaired or refilled.

3.4 Using the product

ATTENTION!

◊ During operation, the surface of the product becomes very hot. Only touch the handles, otherwise you may get burned!

1. Follow the instructions in 3.2 "Connecting the product to the LP gas cylinder" and 3.3 "Checking for leaks" before using the product.
2. Open the lid and make sure all buttons are set to OFF.
3. Open the gas valve on the gas cylinder.
4. Press the control knob and turn it counterclockwise to the HI position until you hear a click and the burner lights.
5. If the burner does not light, turn the burner knob to OFF, wait 5 minutes and repeat the lighting procedure.
6. When the burner is lit, release the control knob and adjust the flame by turning the knob between HI and LOW.
7. You can now place food on the cooking grids.
8. After each cooking session, open the lid and turn the control knobs to the HI position. Let the burners burn for 5 minutes with the lid open. This will burn cooking residue and make cleaning easier.
9. Turn the control knobs to OFF and wait for the product to cool before closing the lid.
10. Disconnect the gas bottle according to the instructions in 3.6 "Disconnecting the gas bottle after use".
11. When the product has cooled down, clean and store it according to the instructions in 5 "Maintenance and cleaning" and 6 "Storage".

NOTE

◊ If the burner does not light after several attempts, try lighting it with a match. Place a match in the match holder and use the holder to slide the lit match through the grates to the left of the burner you want to light. Press the burner knob and turn it to the HI position.

3.5 Tips for grilling

- To prevent food from sticking to the grill, before each barbecue session and after changing food, apply a thin layer of cooking or vegetable oil with a brush. When grilling for the first time, the color of the coating may change. This is normal.
- To reduce the risk of fire, keep your barbecue clean, use lean meats and avoid cooking at very high temperatures.
- Place delicate foods such as fish and vegetables in aluminum foil for indirect cooking.
- To avoid losing natural juices, use long-handled tongs or a spatula instead of a fork and only turn the food once during cooking.
- You can set the burners to different levels so that food can be cooked simultaneously at different internal temperatures.

3.6 Disconnecting the gas cylinder after use

1. Close the cylinder gas valve by turning the control lever G2 to the 9 o'clock position.
2. Press the release button G3 and pull up the pressure regulator G1 (Alternatively, turn the nut on regulator G1 counterclockwise to loosen it).
3. Store regulator G1 with the gas hose under the product, making sure the hose is not twisted.
4. Store the gas bottle properly according to the instructions in Chapter 6 " Storage". Always store the gas bottle outdoors.

4. Troubleshooting

If the following problems occur while using the product, refer to the table below to find a solution. If the problems cannot be solved using these options, please contact our customer service.

Problem	Cause	Solution
Burner does not burn with igniter.	Wires or electrode are covered with cooking residue.	Clean the wires and electrodes with alcohol.
	Electrode and burners are wet.	Wipe the electrode and burners with a dry cloth.
	Electrode is cracked or broken.	Replace the electrode.
	Wire is loose or disconnected.	Reconnect the wire or replace the electrode/wire connection.
	Wire is shorting (sparking between igniter and electrode).	Replace the electrode/wire.
Burner does not burn with match.	No gas flow.	Check that the gas cylinder is empty. If it is empty, replace or refill it.
	Coupling nut and regulator are not fully connected.	Tighten the coupling nut to a firm stop. Tighten only by hand, do not use tools.
	Obstruction of gas flow.	Clean the burner tubes and check for bent or kinked hoses.
	Spider webs or insect nest in venturi.	Clean the venturi.
	Burner ports clogged or blocked.	Clean the burner ports.

Sudden decrease in gas flow or reduced flame height.	No gas.	Replace or refill the gas cylinder.
	Too much gas. Safety device may have been activated.	Turn both control knobs to OFF, wait 30 seconds and light the barbecue. If the flames are still low, reset the safety by turning both control knobs to OFF and the gas bottle valve to CLOSED (Closed). Disconnect the regulator.
Irregular flame pattern.	Burner ports are clogged or blocked.	Turn both control knobs to HI, wait 1 minute, then turn them back to OFF. Reconnect the regulator and check the connections for leaks. Slowly turn the gas valve on the gas bottle to OPEN, wait 30 seconds and light the barbecue according to instructions.
Flame is yellow or orange.	New burner may contain residual oil.	Clean the burner ports.
	Spider webs or insect nest in venturi.	Let burn for 15 minutes with the lid closed.
	Food residue or grease on burner.	Clean the venturi.
	Poor valve alignment on injector venturi.	Clean the burner ports.
Flame blows out.	Lots of wind.	Make sure that the venturi of the burner is properly connected to the injector.
	Little gas.	Do not use the product in high winds.
	Flow restrictor activated.	Replace or refill the gas cylinder.
Persistent grease fire.	Grease stuck around the burner system.	Relight the product.

Fire in burner tubes.	The burner and/or burner tubes are clogged.	Turn both control knobs to OFF and turn the gas valve on the gas bottle to CLOSED. Leave the lid open and let the fire burn out. After the product has cooled, remove and clean all parts.
Inside lid flaking.	Lid is stainless steel, so no paint is flaking off. Grease on lid has become carbon and is flaking off.	Clean the burner and burner tubes.

5. Maintenance and cleaning

Clean the product with a damp, clean cloth and dry it well. Do not use abrasive or aggressive cleaning agents.

- Wait for the product to cool completely before cleaning.
- Clean the product thoroughly after use and after long-term storage.
- Cooking grate: Clean with hot soapy water. To remove food residue, use mild cream cleaner on a non-abrasive sponge. Rinse well and dry thoroughly. Do not clean grill grates in a self-cleaning oven.
- Burner: In normal use, burning off the residue after cooking keeps the burner clean. The burner should be removed and cleaned annually to prevent build-up. Take extra care when cleaning the area around the burner. Use a pipe cleaner to remove any blockages and a wire brush to remove corrosion from the burner surfaces. When replacing the burner, check that the burner venturi tubes fit over the valve outlets.
- Housing: Periodically remove excess grease or fat from the housing with a soft plastic or wooden scraper. Remove cooking surfaces and burners for complete cleaning and use only hot soapy water and a cloth or brush with nylon bristles. Do not immerse components in water. Check the operation of the burners after carefully placing them back into the housing.
- Fasteners: Annual inspection and tightening of metal fasteners is recommended.

6. Storage

ALWAYS STORE THE GAS CYLINDER OUTDOORS!

Het product opbergen:

- Wait for the product to cool and clean the product thoroughly before storing it.
- Store the product in a cool, dry place. Cover the burners with aluminum foil to prevent insects or other debris from accumulating in the burner holes.
- Prefer not to leave the product outdoors when not in use. Store the product in a dry, clean place, away from extremely high or low temperatures.
- If the product is stored outdoors, cover it well to protect it from weather conditions.
- If the barbecue is stored indoors, the gas bottle should be disconnected and left outdoors.

Storing the gas cylinder:

- Protect the gas valve of the gas bottle with a cap nut and safety cap.
- Always store the gas bottle outdoors.
- Store the gas cylinder in a dry, well-ventilated area away from sources of heat or ignition.
- Do not store the gas cylinder underground or in hallways.
- Always store the gas cylinder upright, even when empty.

7. Disposal and recycle

Think about the environment and contribute to a cleaner living environment! You can contact your local council for all information on disposal options for discarded products.

7.1 Disposal

At the end of its life, do not dispose of the product with normal household waste, but hand it in at a government designated collection point for recycling.

Dispose of the packaging and accessories in accordance with the environmental regulations in force in your local council. Pay attention to the symbols on the different packaging materials and - if necessary - dispose of them separately. The packaging materials are marked with letters and numbers: 1-7: plastic, 20-22: paper and cardboard, 80-98 composite materials.

8. Symbols

The following warnings and symbols are used in this manual, on the packaging and on the product (where applicable).

Symbol	Description
	Follow the instructions in the user manual and keep it for future reference.
	A warning with this symbol indicates a potentially hazardous situation that could result in serious damage and/or fatal injury.
	A note contains additional information relevant to the use of the product.
	A warning with this symbol indicates a potentially hazardous situation that may result in minor damage and/or moderate injury.
	Beware: hot!
	Handle with care.
	Food safe.
	Never use this product indoors!

9. CE- DECLARATION OF CONFORMITY

Product Name	Outdoor Portable Gas Grill		CE 1336-24	
Model Number	KB4015/KB4016			
Company Name	©LifeGoods Group B.V. P.J. Oudweg 4, 1314 CH Almere (NL)			
Gas Category	I3B/P	I3+	I3B/P(37)	I3B/P(50)
Gas Type & Nominal Pressure	Butane, Propane and mixtures thereof at 30 mbar.	G30 Butane at 28-30mbar G31 Propane at 37 mbar.	Butane, Propane and mixtures thereof at 37 mbar.	Butane, Propane and mixtures thereof at 50 mbar.
Country code	LU, NL, DK, FI, SE, CY, CZ, EE, LT, MT, SK, SI, BG, IS, NO, TR, HR, RO, IT, HU	BE, FR, IT, LU, IE, GB, GR, PT, ES, CY, CZ, LT, SK, CH, SI	PL	DE, AT, CH, SK
Nominal heat output	3,7 kW	3,7 kW	3,7 kW	3,7 kW
Burner injection size	0,66mm	0,66mm	0,62mm	0,58mm
Total heat input	269g/u	G30: 269g/u G31: 264g/u	269g/u	269g/u
Destination Country	NL, BE			
PIN Number	1336DM002			
Made in China				
Caution: Read the intructions before using the product. Use the product outdoors only. Warning: parts of the product can become very hot. Keep out of reach of young children.				

10. Disclaimer

Changes reserved; specifications are subject to change without stating grounds for doing so.

UK

If you have any questions, please contact our customer care center.
Our contact details are below:


0044-800-240-4004


enquiries@mhstar.co.uk

IMPORTER ADDRESS:
MH STAR UK LTD
Unit 27, Perivale Park,
Horsenden lane South
Perivale, UB6 7RH
MADE IN CHINA

ES

Si tiene alguna pregunta, comuníquese con nuestro Centro de Atención al Cliente.
Nuestros datos de contacto son los siguientes:


0034-931294512


atencioncliente@aosom.es

Importador/REP:
Spanish Aosom, S.L.
C/ Roc Gros, nº 15. 08550, Els Hostalets de Balenyà,
Spain.
B66295775
HECHO EN CHINA

FR

Si vous avez la moindre question, veuillez contacter notre centre d'assistance à la clientèle.
Nos coordonnées sont les suivantes:


0033-1-84166106


aosom@mhfrance.fr

Importé par/REP :
MH France
2, rue Maurice Hartmann
92130 Issy-les-Moulineaux
France
Fabriqué en Chine

PT

Se tiver alguma dúvida, por favor contacte o nosso Centro de Atendimento ao Cliente.
Os nossos dados de contacto são os seguintes:


0034-931294512


info@aosom.pt.

IMPORTADOR:
SPANISH AOSOM, S.L
C.ROC GROS N.15, 08550. ELS HOSTALETS DE BALENYÀ
TEL: 931294512 (SEG-SEX DAS 7:30H ÀS 16:30H)
INFO@AOSOM.PT
FEITO NA CHINA

DE

Wenn Sie Fragen haben, wenden Sie sich bitte an unser Kundendienstzentrum.
Unsere Kontaktdaten stehen unten:


+49 40 87408465


service@aosom.de

Importeur/REP:
MH Handel GmbH
Wendenstraße 309
D-20537 Hamburg
Germany
IN CHINA HERGESTELLT

IT

In caso di dubbio, si prega di contattare il nostro centro assistenza clienti.
I nostri dettagli di contatto sono di seguito:


0039-0249471447


clienti@aosom.it

IMPORTATO DA/REP:
AOSOM Italy srl
Centro Direzionale Milanofiori
Strada 1 Palazzo F1
20057 Assago (MI)
P.I.: 08567220960
FATTO IN CINA