
Outsunny

IN231200119V04_UK

860-335V70

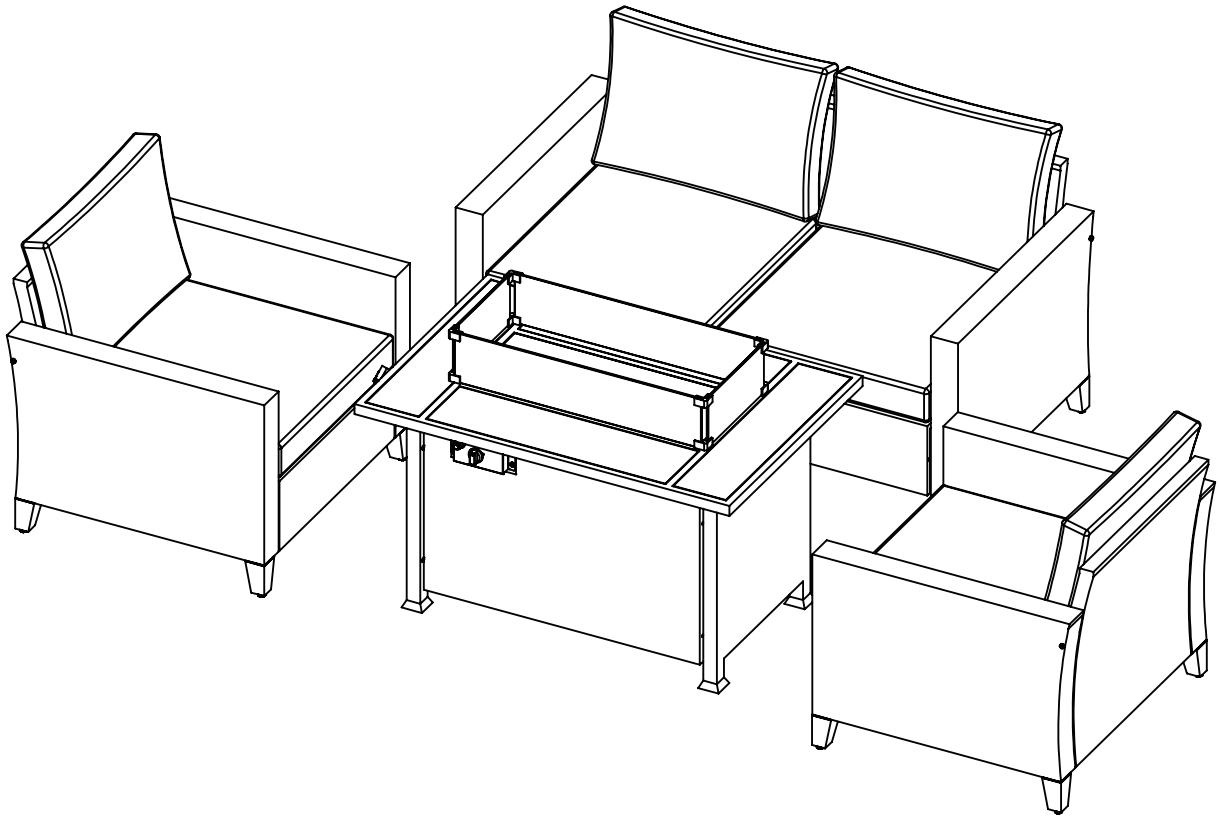

25 STEPS

120MIN

120 kg PER SEAT

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

ASSEMBLY INSTRUCTIONS

EN

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

Only for domestic use

Use tips:

*Put the chair stably on a flat floor.
*Mount the garden chairs in the shelter of the weather.
*Stay away from open flames.
*Don’t hang anything in the structure.
*Avoid the overload at the anchors/structure.
*It is advised that don’t stay on the chairs when there is a storm.
*Do not use in adverse weather condition and cover furniture when not in use.

Precautions before assembly:

*Prepare a clean and dry mounting area.
*Verify that the product is not damaged.
*Check that none of the pieces are missing.

Maintenance:

*Clean with a soft fabric.
*Regularly remove leaves and / or water collected on the canvas.
*Check the chair regularly.

Storage conditions:

*The fabric should be stored completely dry, in a clean and dry place to avoid the risks of mold.




Maintenance:

*Don't use this product if the seat cloths, cloth cushion or tarpaulins are ageing, and contact our customer service.





Caution with the risks of pinching or cuts during assembly.
The manufacturer declines all responsibility in case of damages due to a bad installation or due to weather.

PACKING DETALS:TOTAL 5 BOXES



BOX 1/5:

PART NO	PARTS	QTY
C		1
D		1
E		1
F		1
I		2
J		1
Hardware Kit		1

BOX 2/5:




PART NO	PARTS	QTY
C		1
D		1
G		1
H		1
M		1
N		1
I		2
J		1

BOX 3/5:








PRT NO	PARTS	QTY
A		3
B		3
K		16

PACKING DETALS:TOTAL 5 BOXES




BOX 4/5:

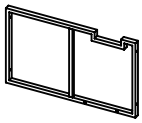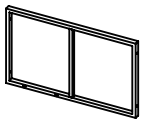PART NO	PARTS	QTY
O		1
P		1
J		2

BOX 5/5:


PART NO	PARTS	QTY
L		1
Q		1
R		1
S		1
T		1
U		2
V		2
W		2
X		2

Parts List

Part No	Part Image	Qty	Part No	Part Image	Qty
AA		100 *+2(spare)*	GG	 M6*100	6
BB		16 *+1(spare)*	HH		16 *+1(spare)*
CC	 M6*16	14 *+1(spare)*	II		34 *+2(spare)*
DD	 M6*35	4 *+1(spare)*	JJ		4
EE	 M6*40	8 *+1(spare)*	KK		4
FF	 M6*45	34 *+2(spare)*			

01


AA*6PCS
FF*3PCS
II*3PCS

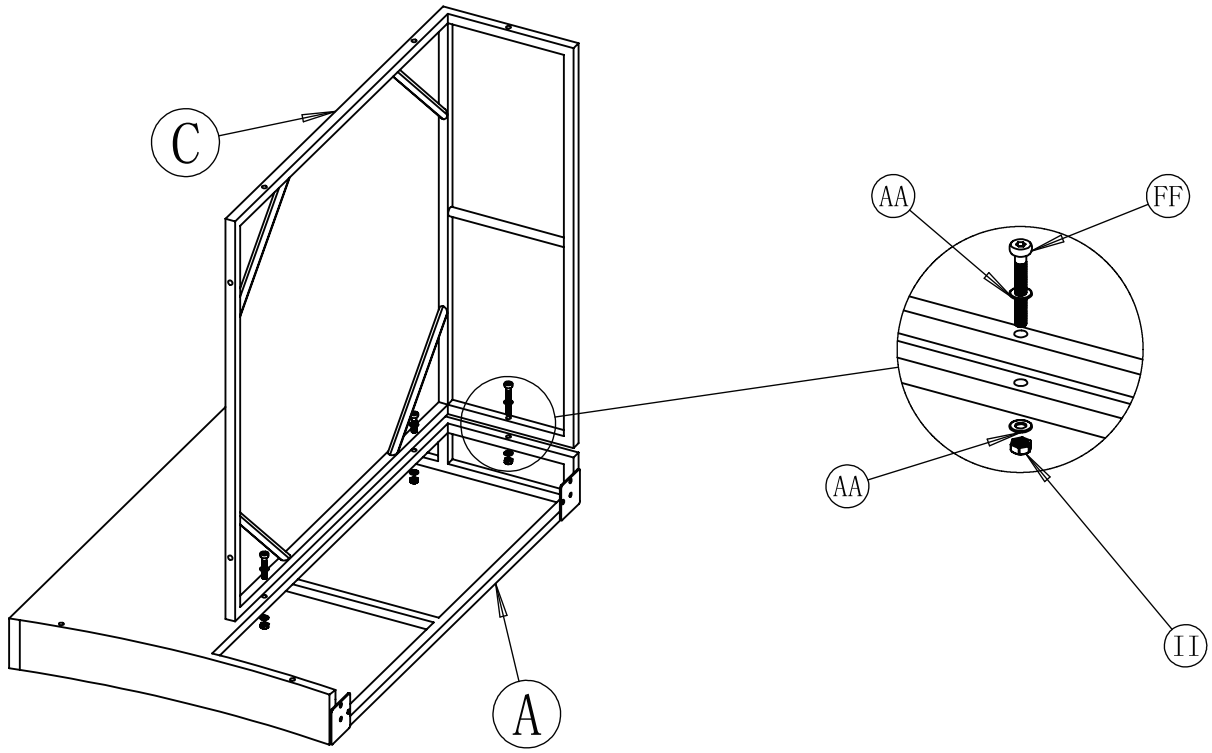

x2

02


AA*6PCS
FF*3PCS
II*3PCS

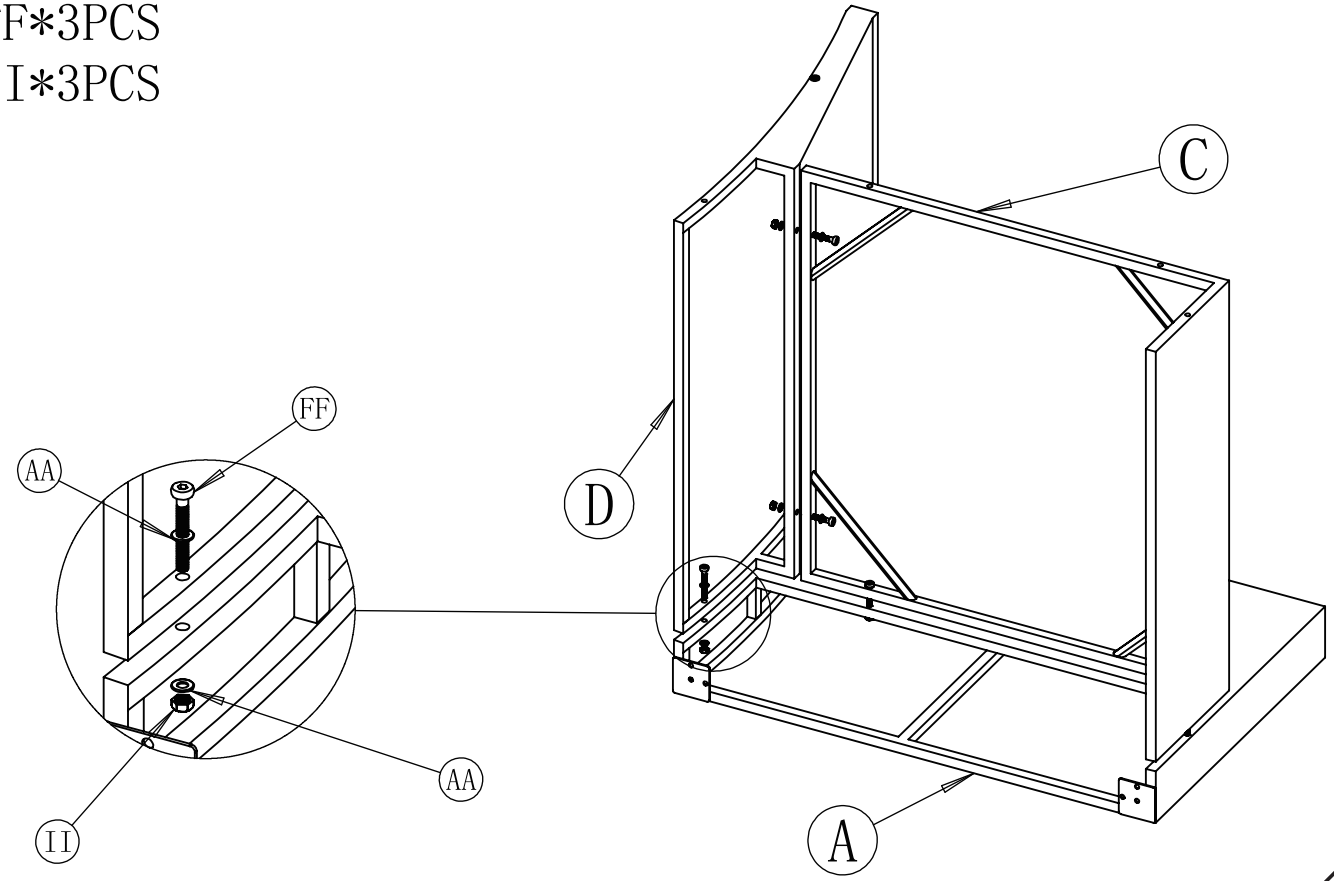

x2

03


AA*6PCS
FF*3PCS
II*3PCS

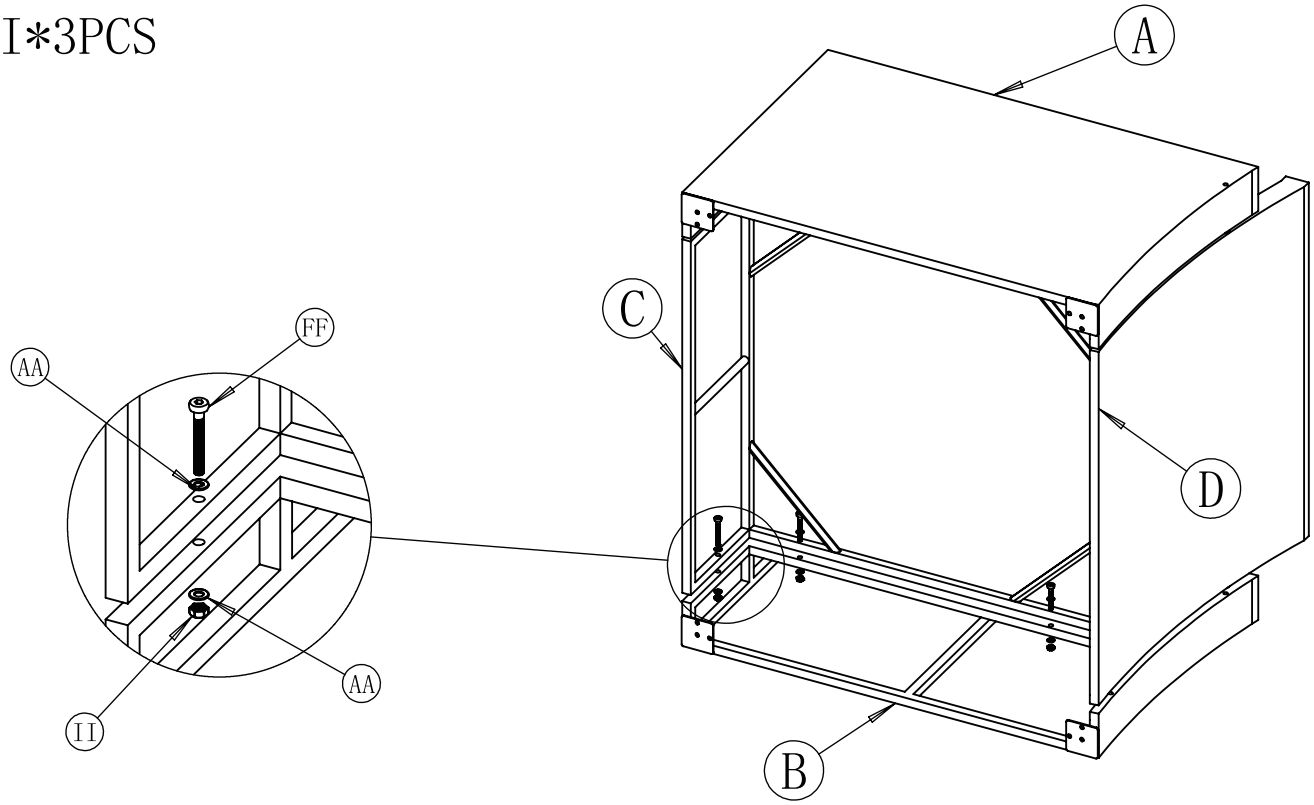

x2

04


AA*2PCS
FF*1PC
II*1PC

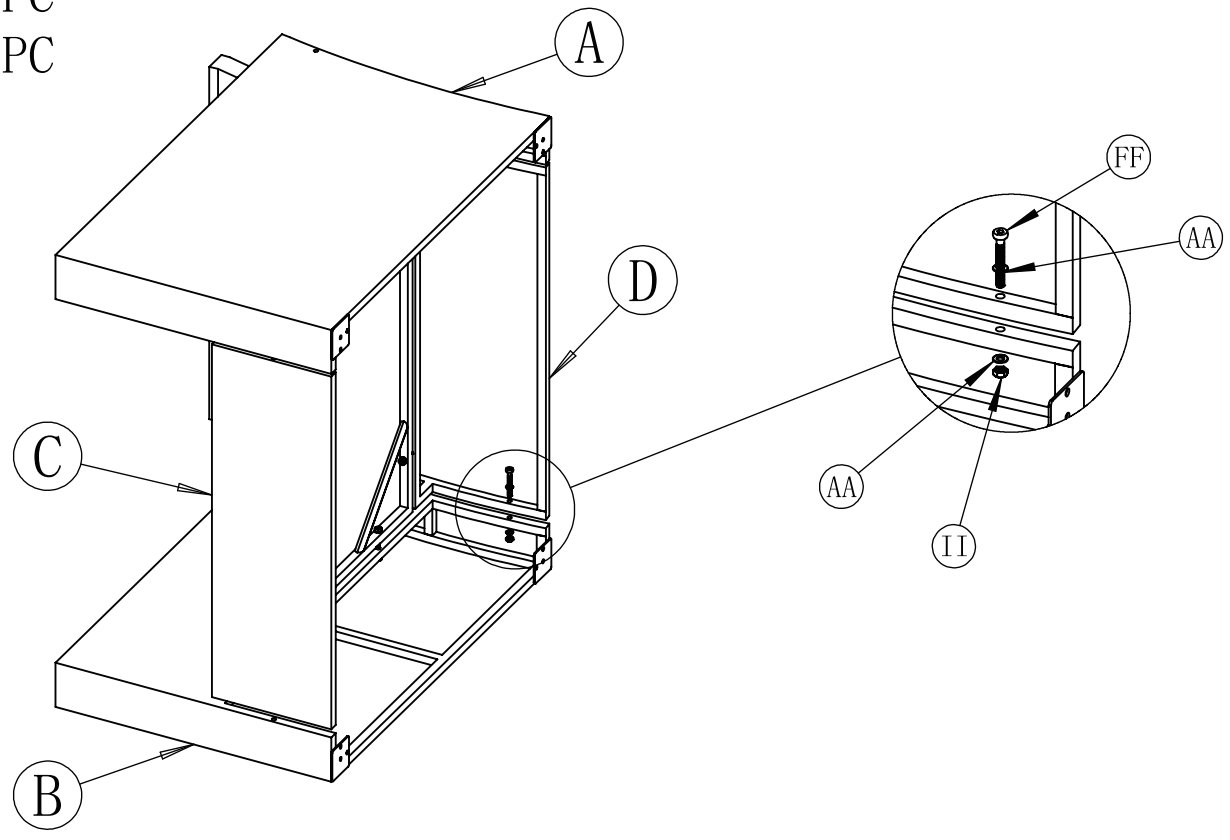

x2

05


BB*4PCS
HH*4PCS

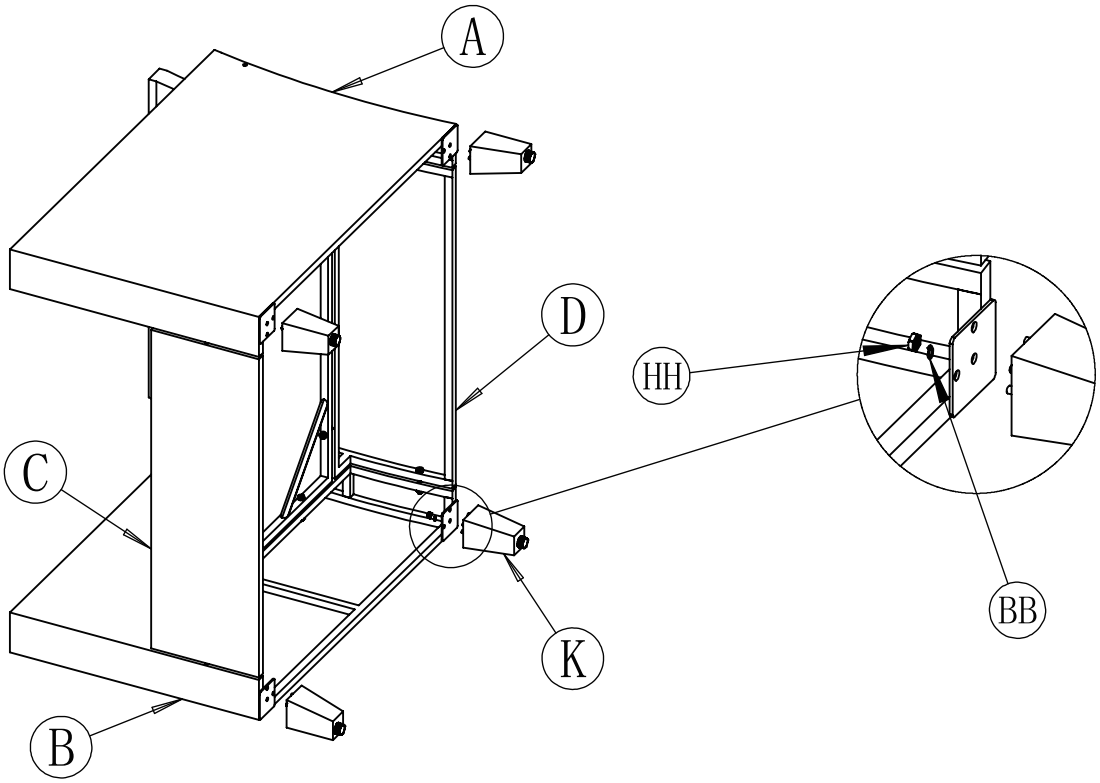

x2


06

AA*2PCS
GG*2PCS

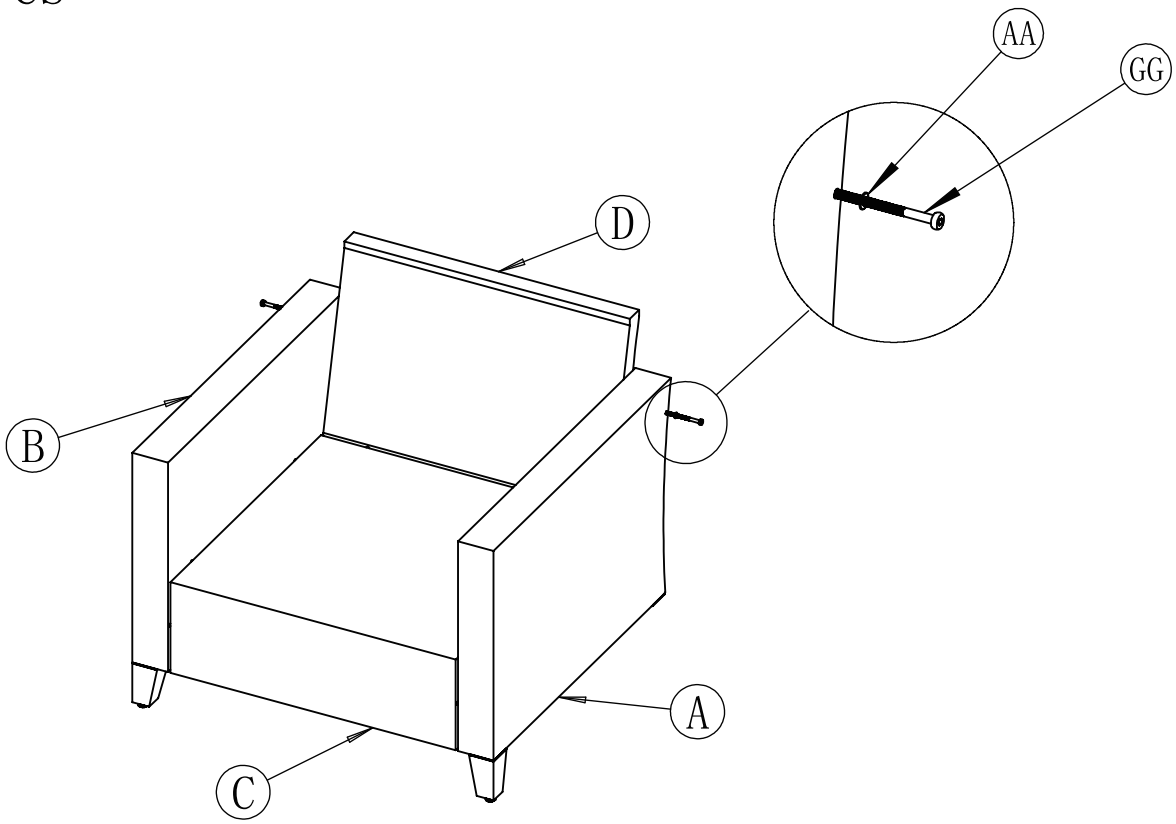

x2


07

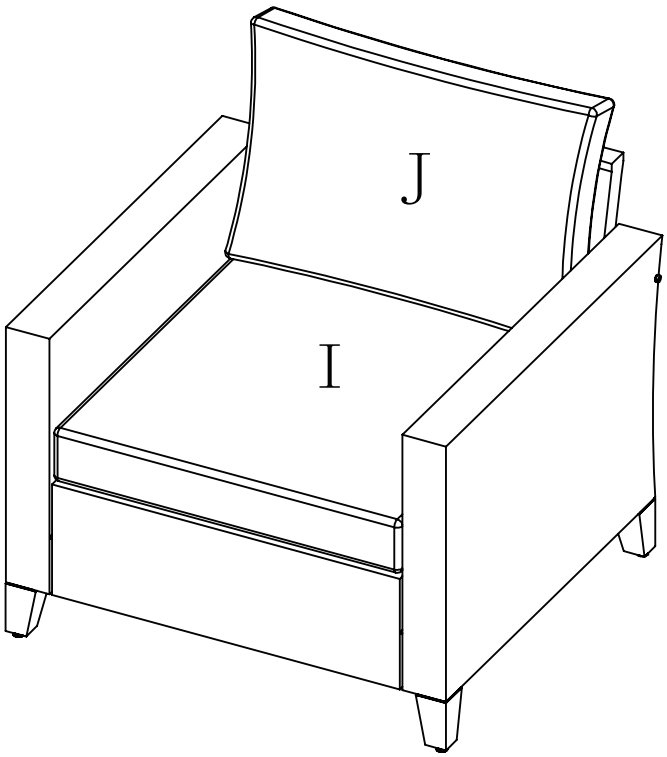

x2


08

AA*6PCS
FF*3PCS
II*3PCS

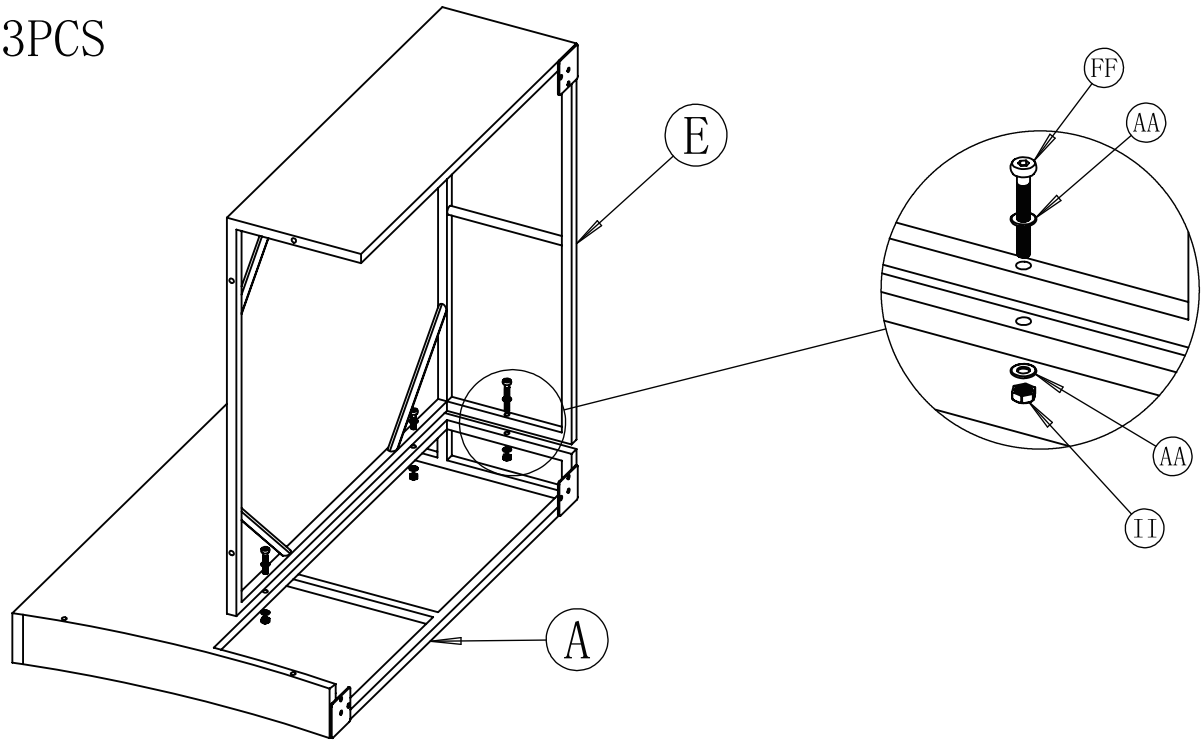


09

AA*4PCS
FF*2PCS
II*2PCS

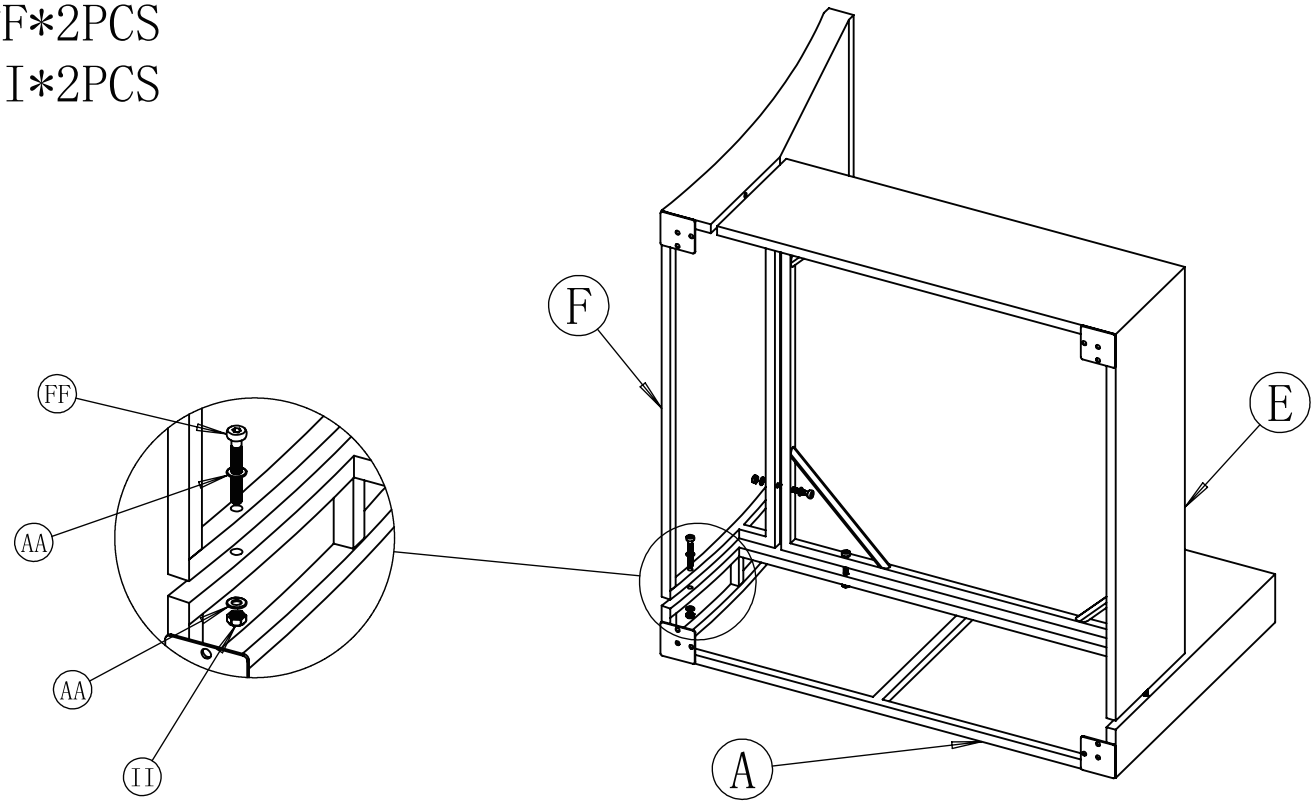


10

AA*5PCS
FF*2PCS
GG*1PC
II*2PCS

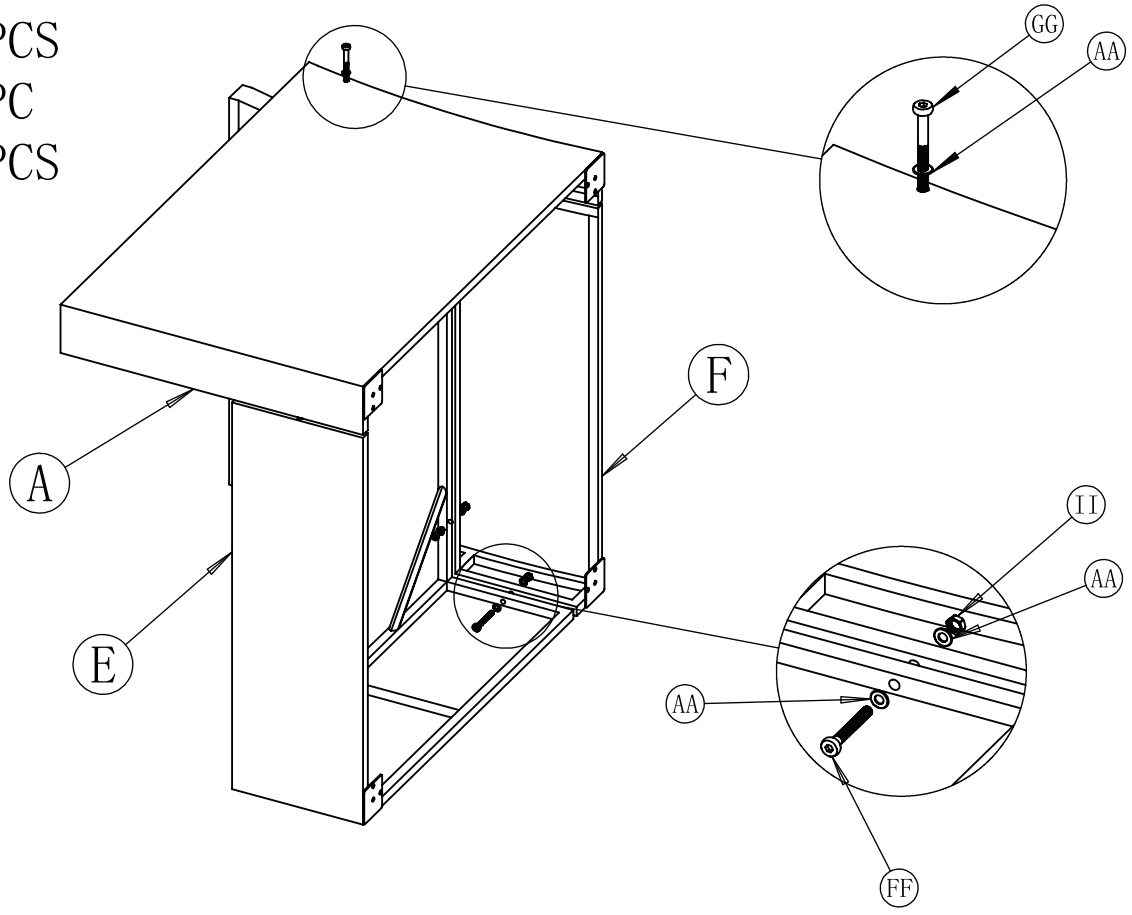


11

BB*4PCS
HH*4PCS

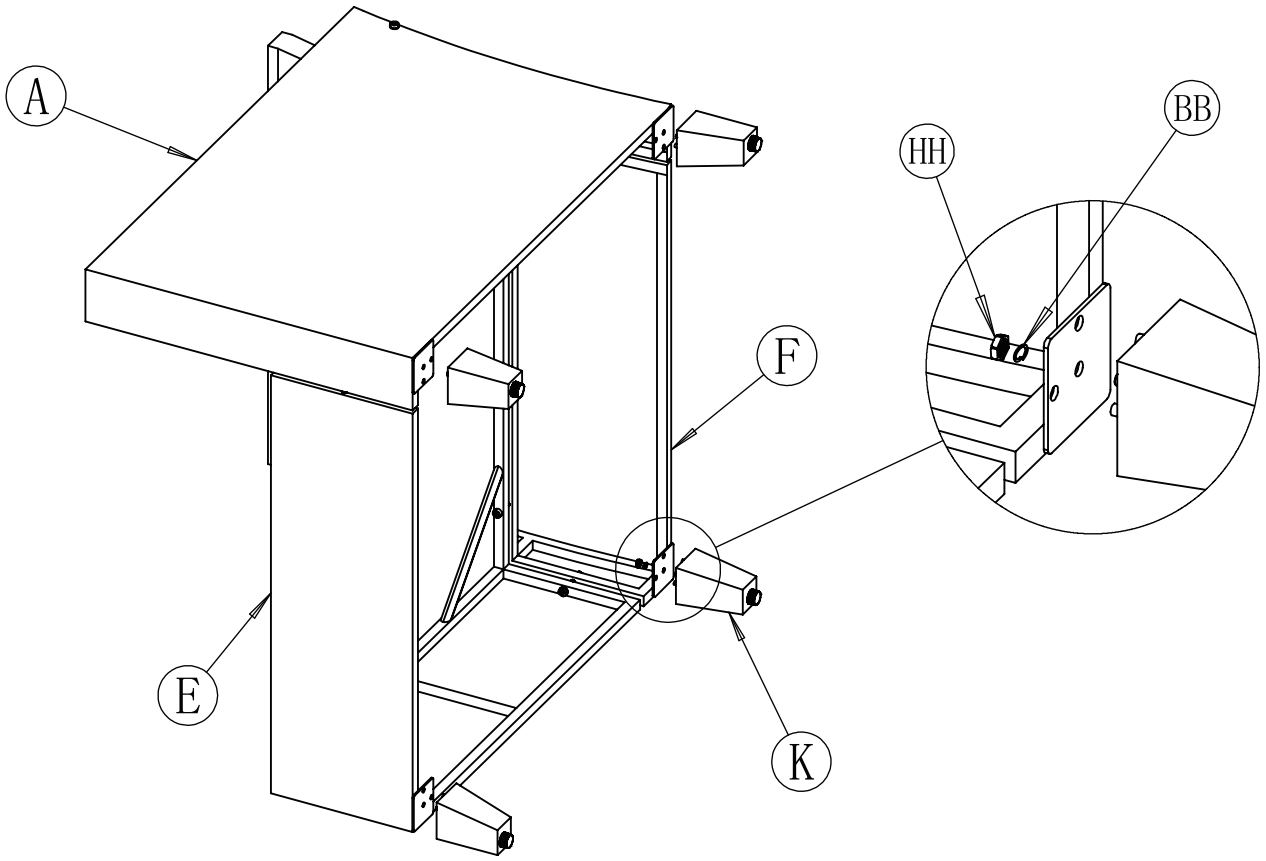


12

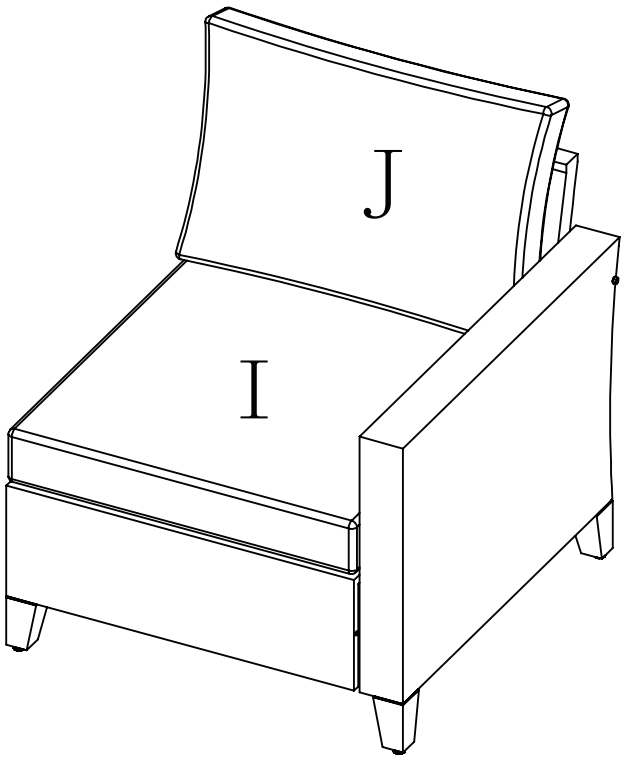


13

AA*6PCS
FF*3PCS
II*3PCS

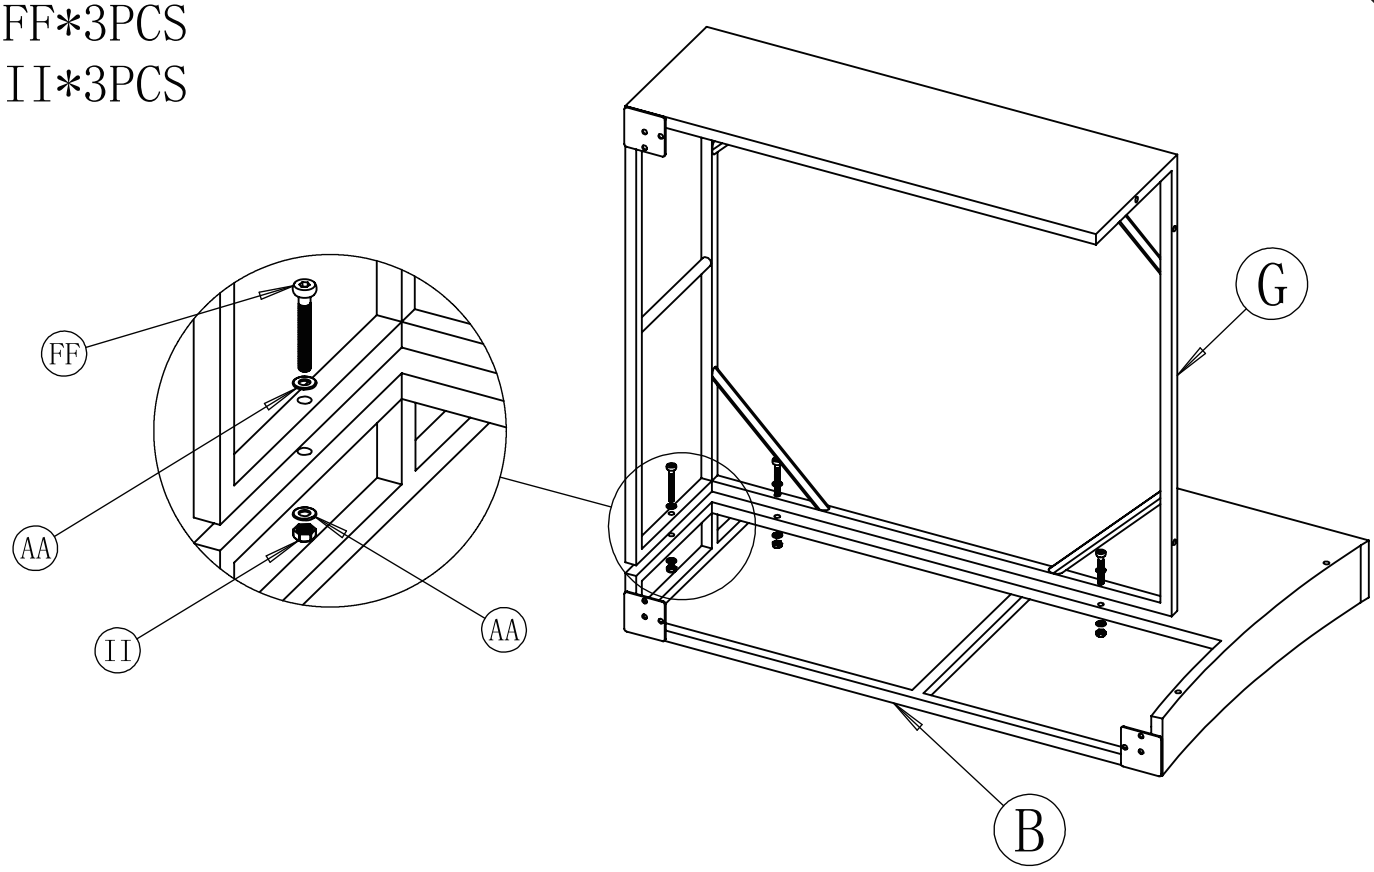


14

AA*4PCS
FF*2PCS
II*2PCS

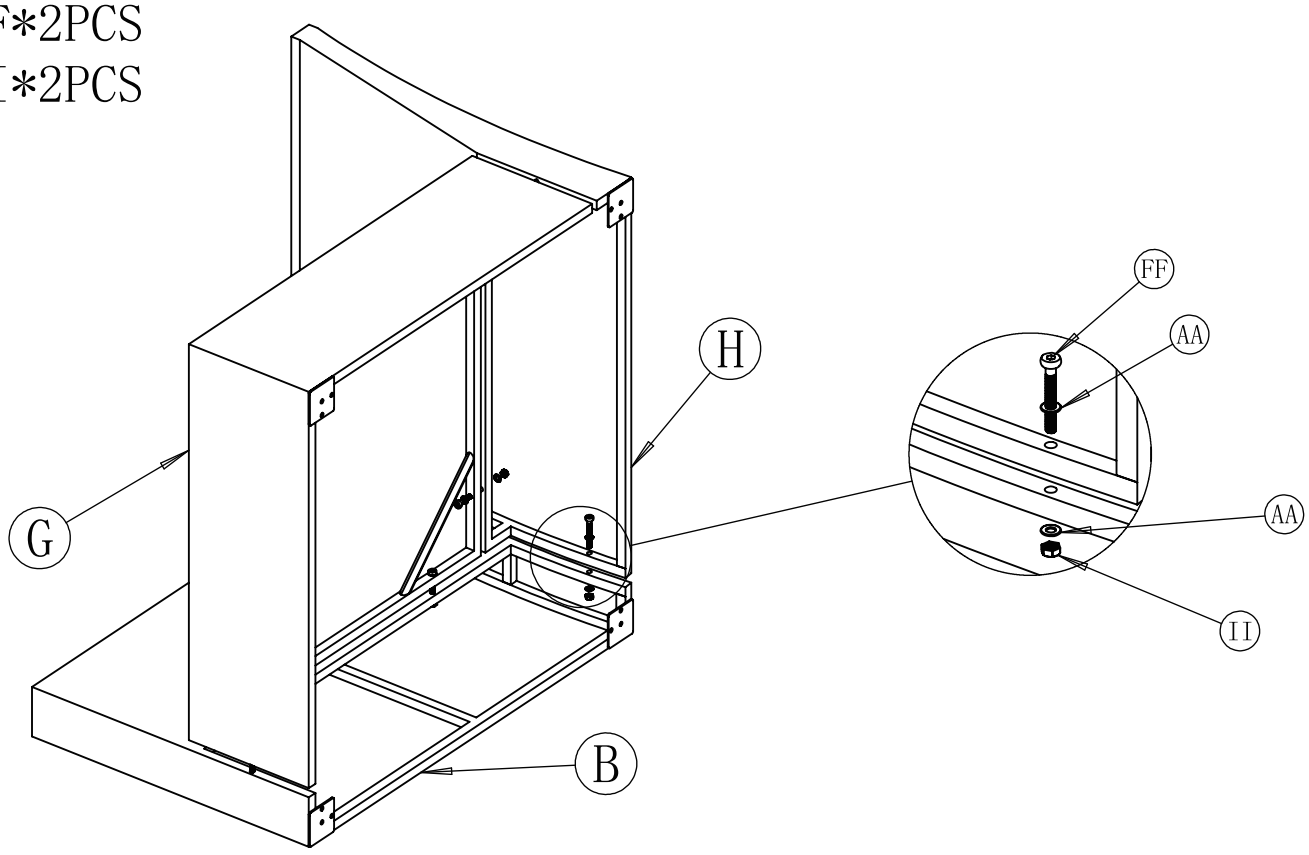


15

AA*5PCS
FF*2PCS
GG*1PC
II*2PCS

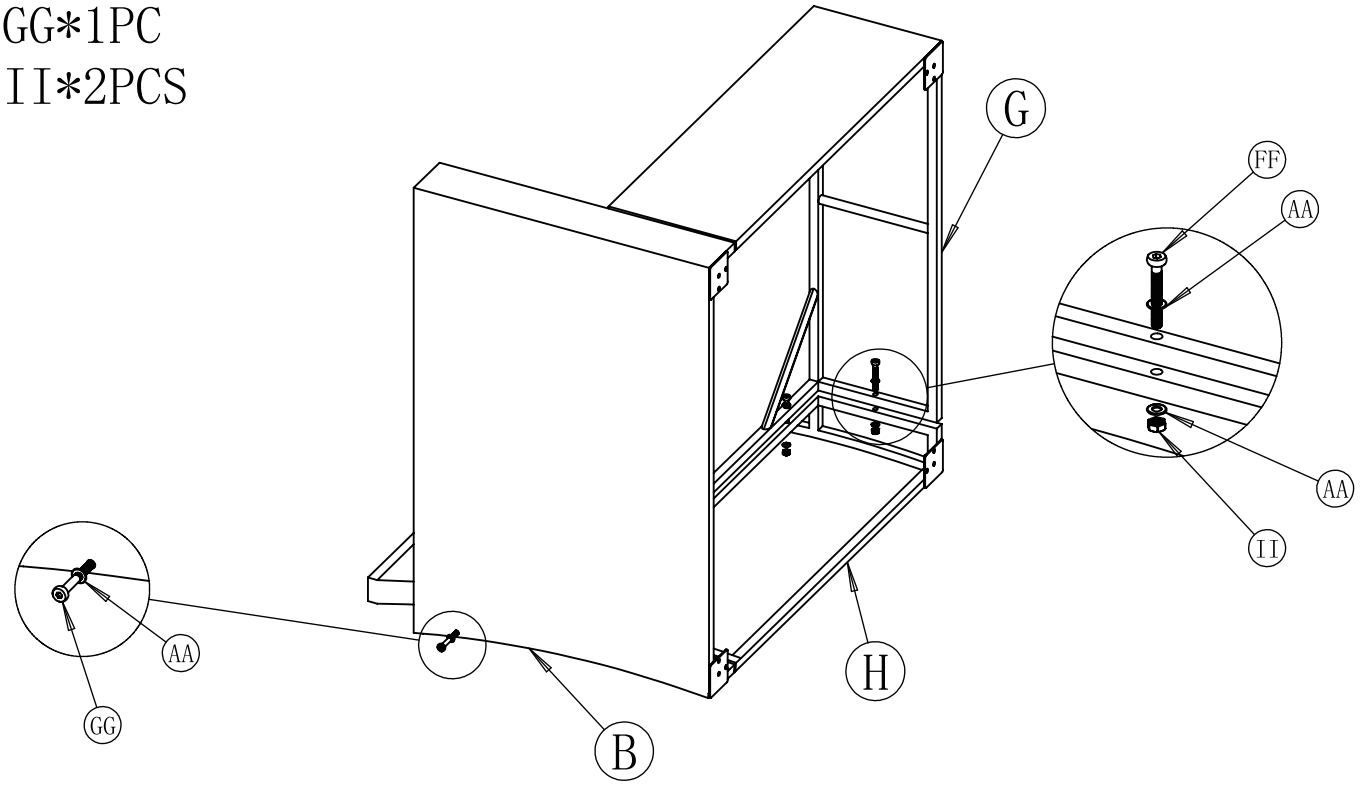


16

BB*4PCS
HH*4PCS

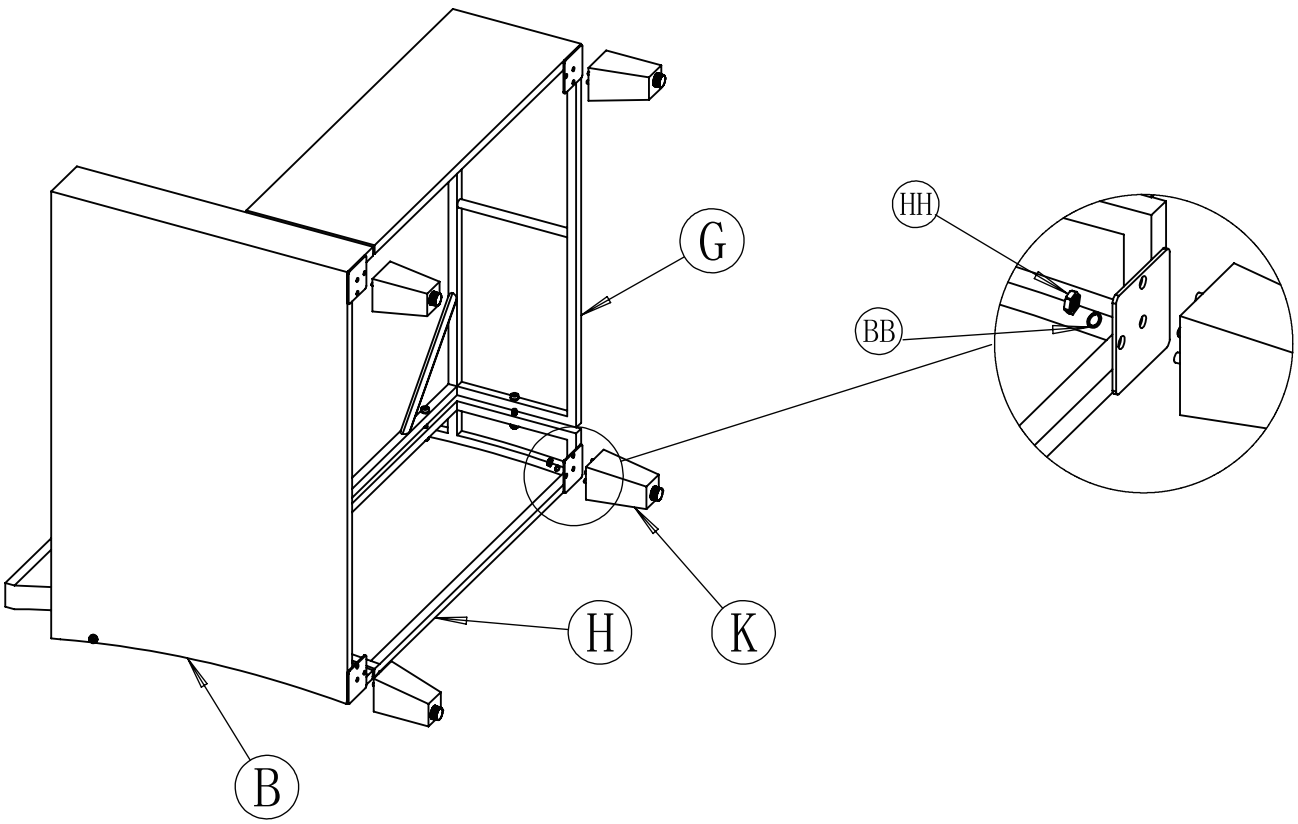


17

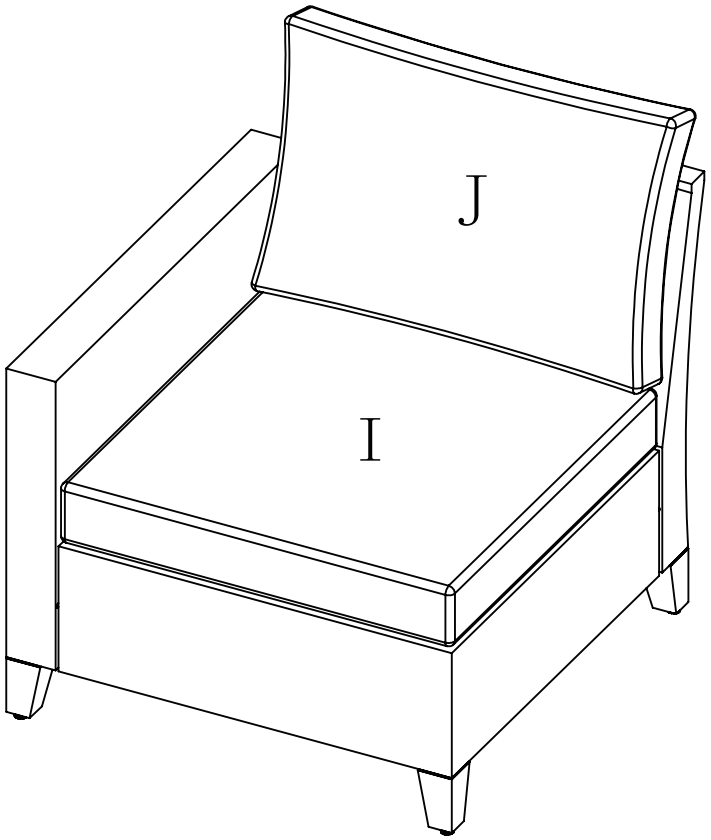


18

AA*10PCS
CC*10PCS

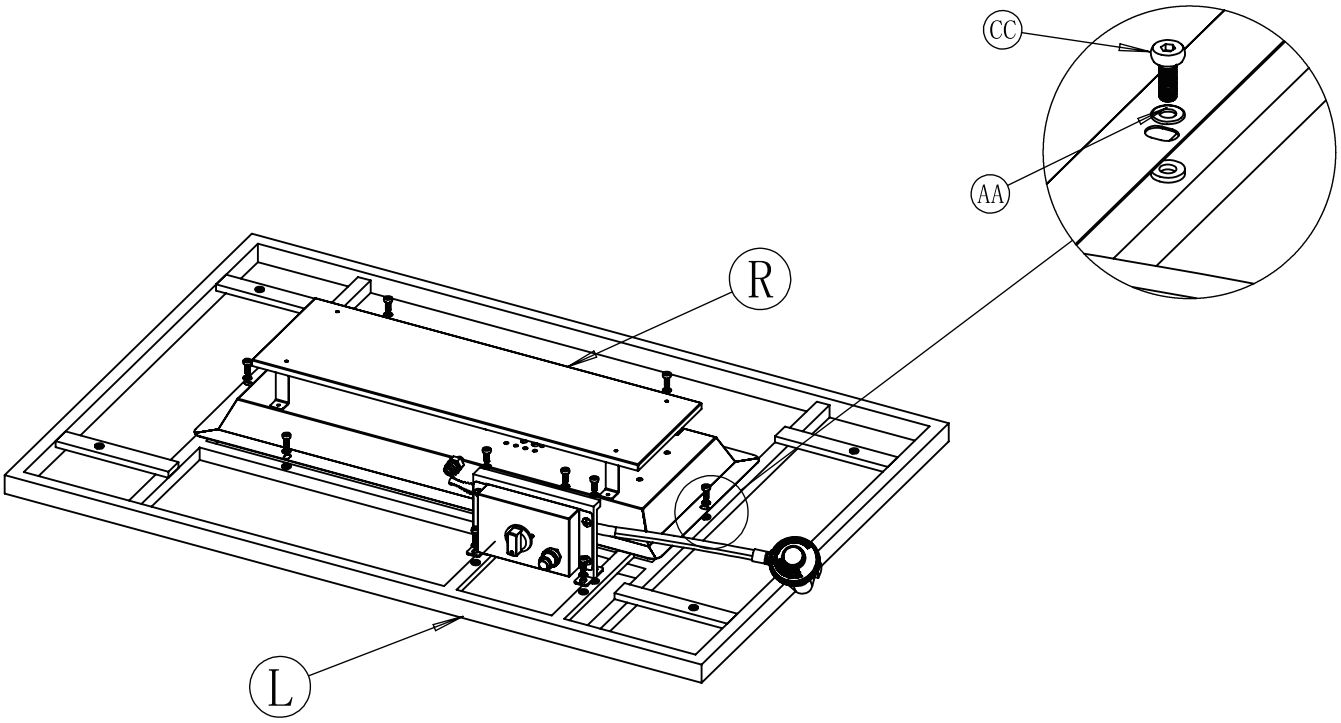


19

AA*2PCS
CC*2PCS

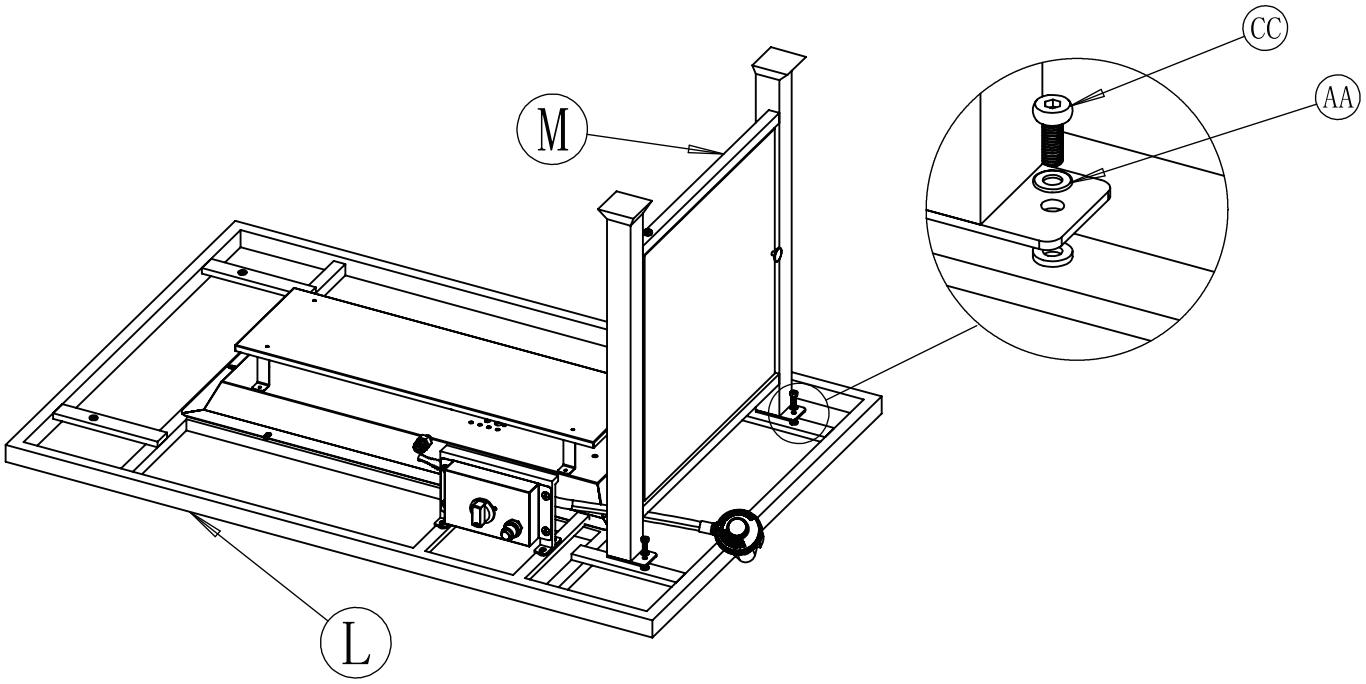


20

AA*2PCS
CC*2PCS

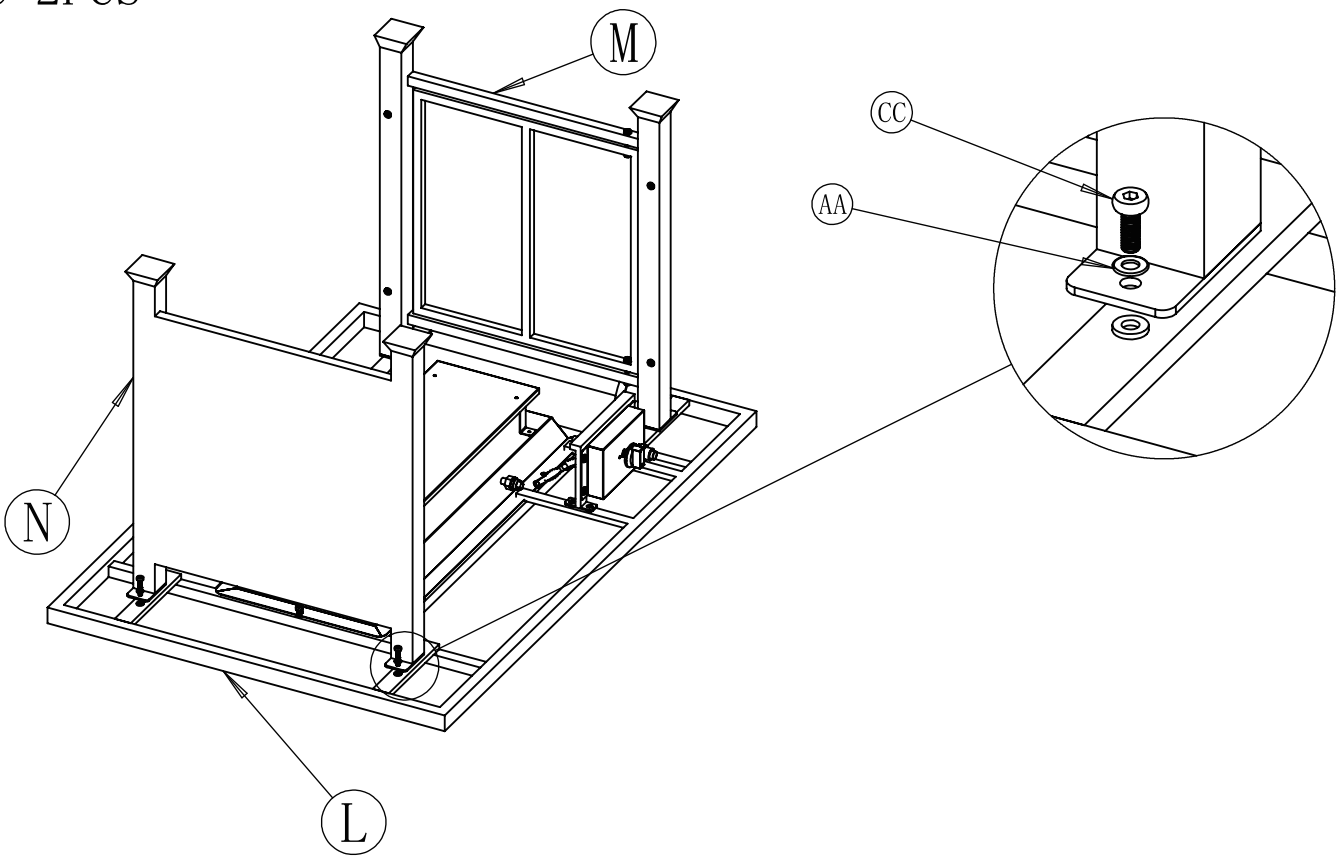


21

AA*4PCS
EE*4PCS

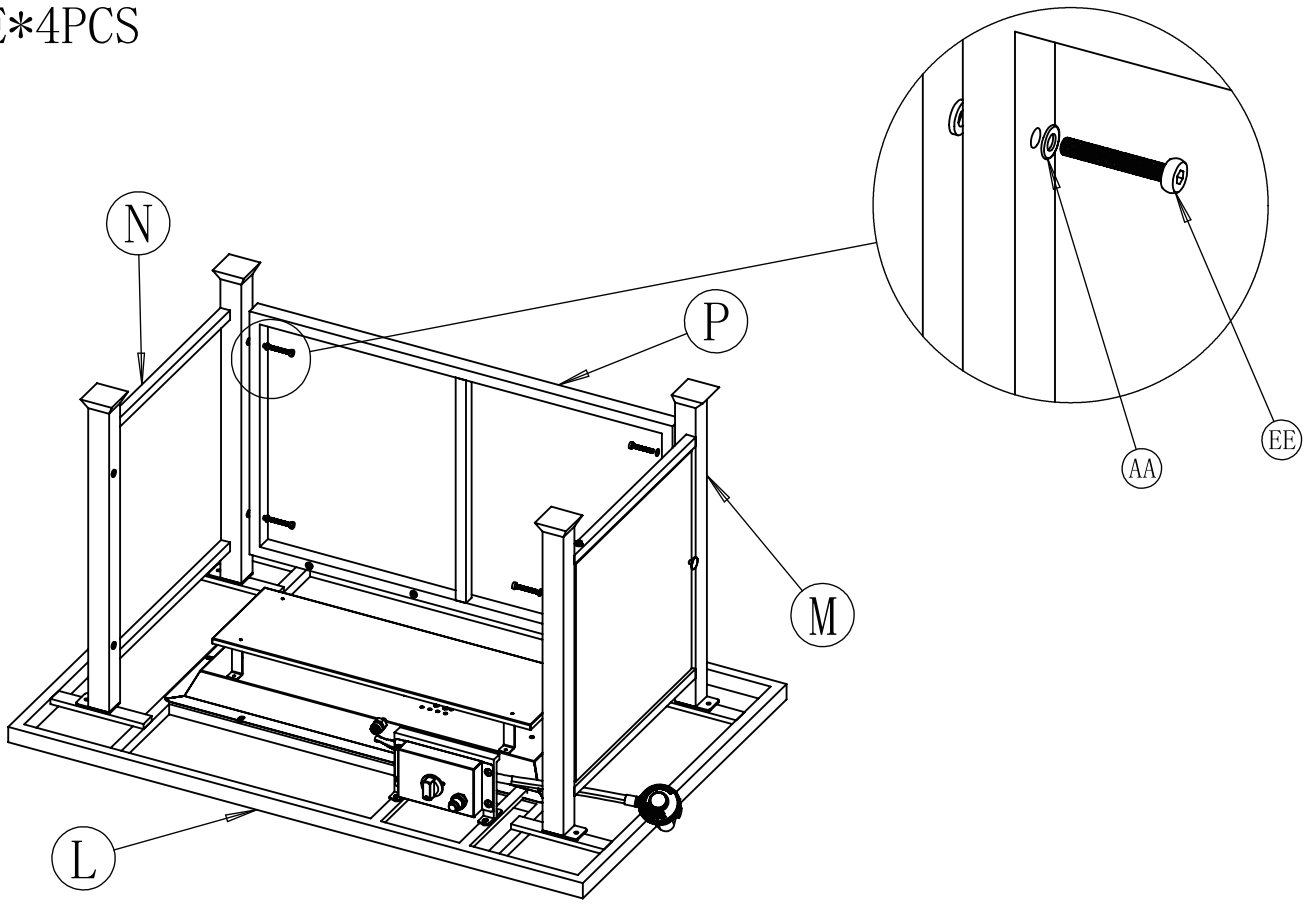


22

AA*4PCS
EE*4PCS

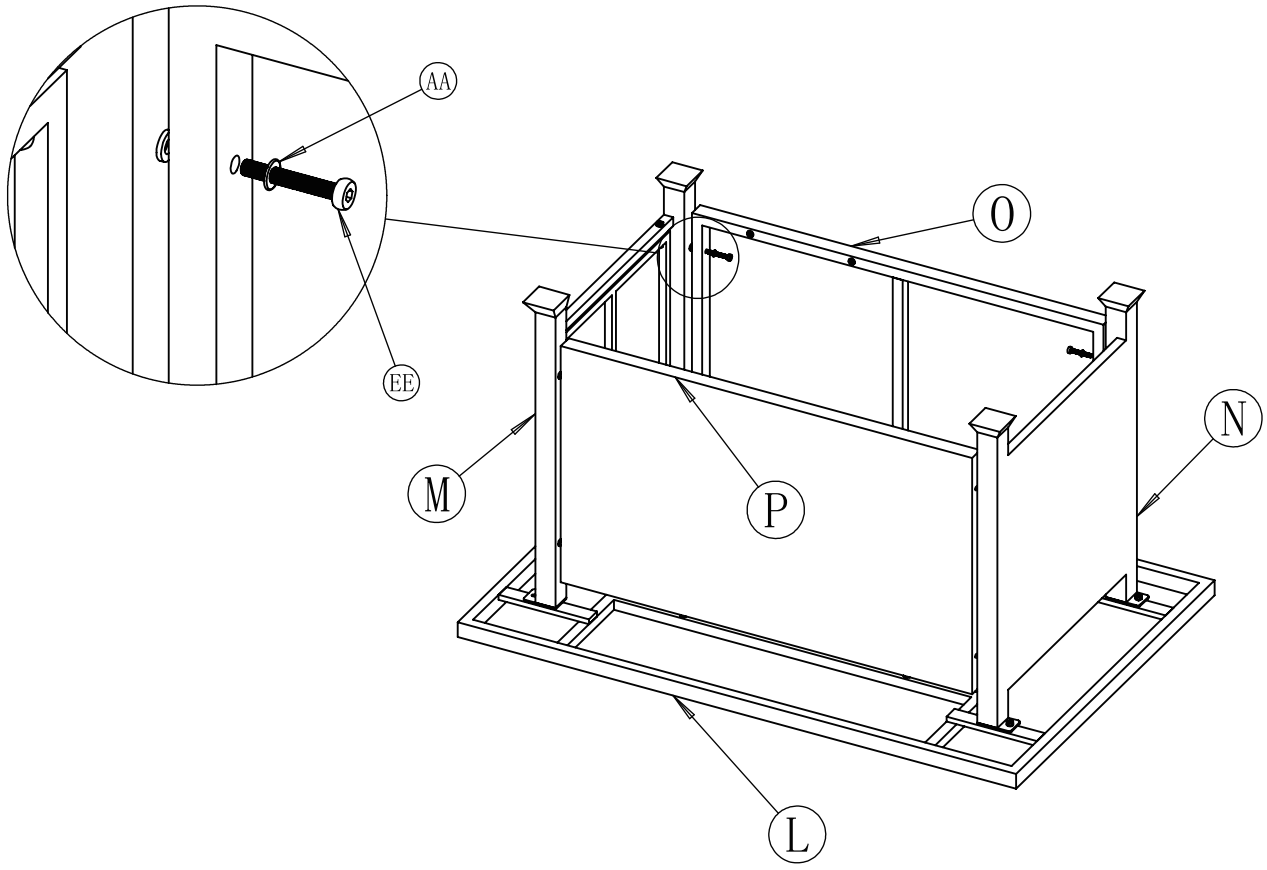


23


AA*4PCS
DD*4PCS

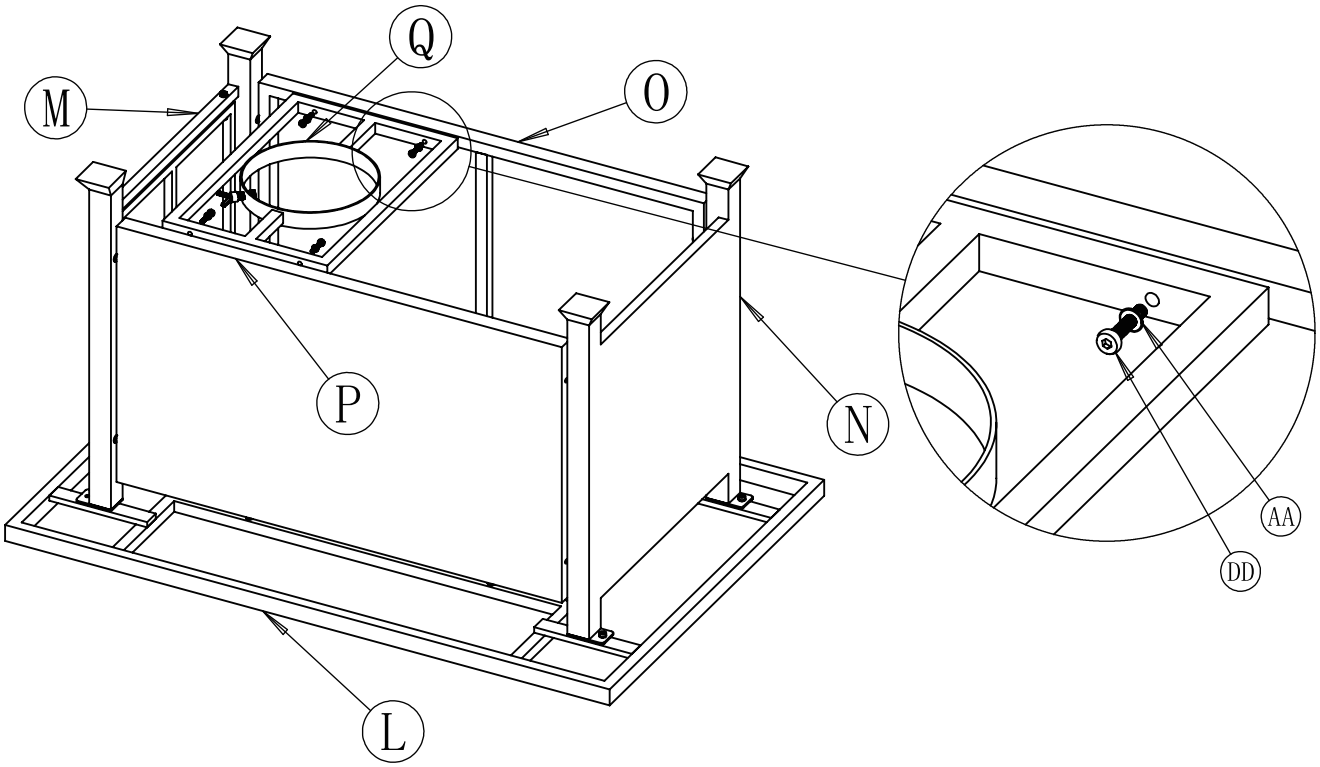

24

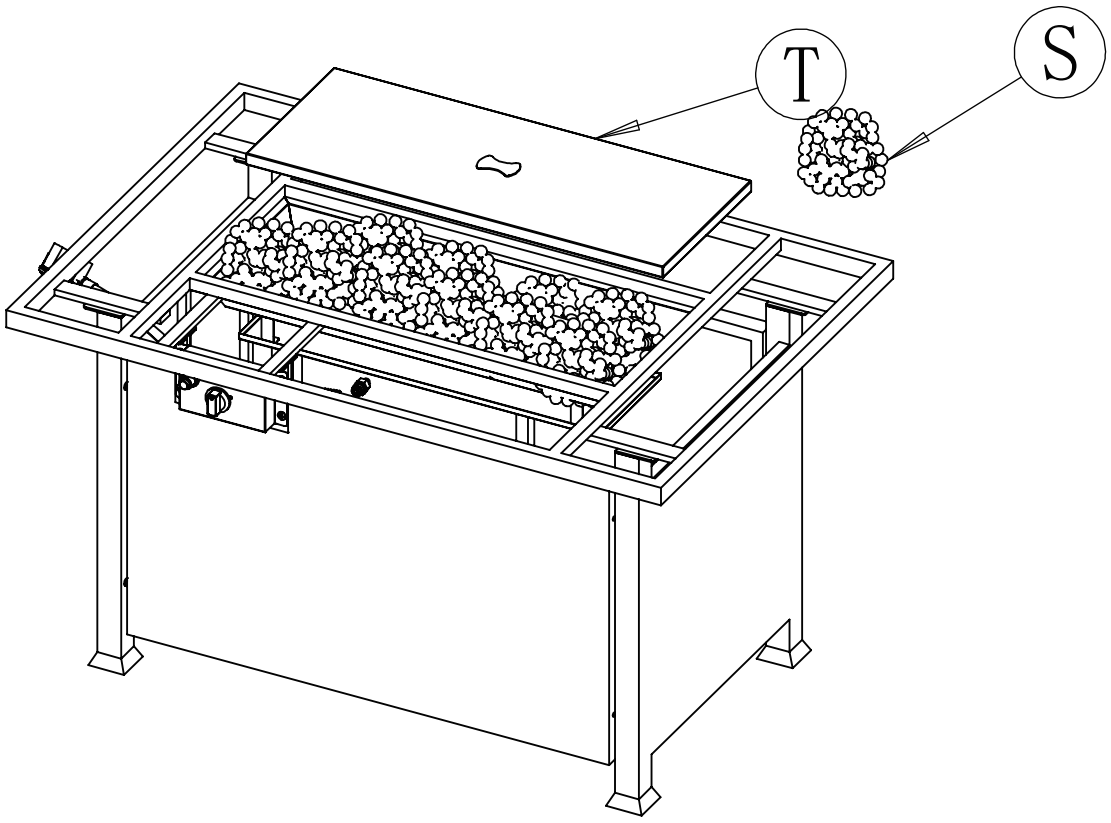


23

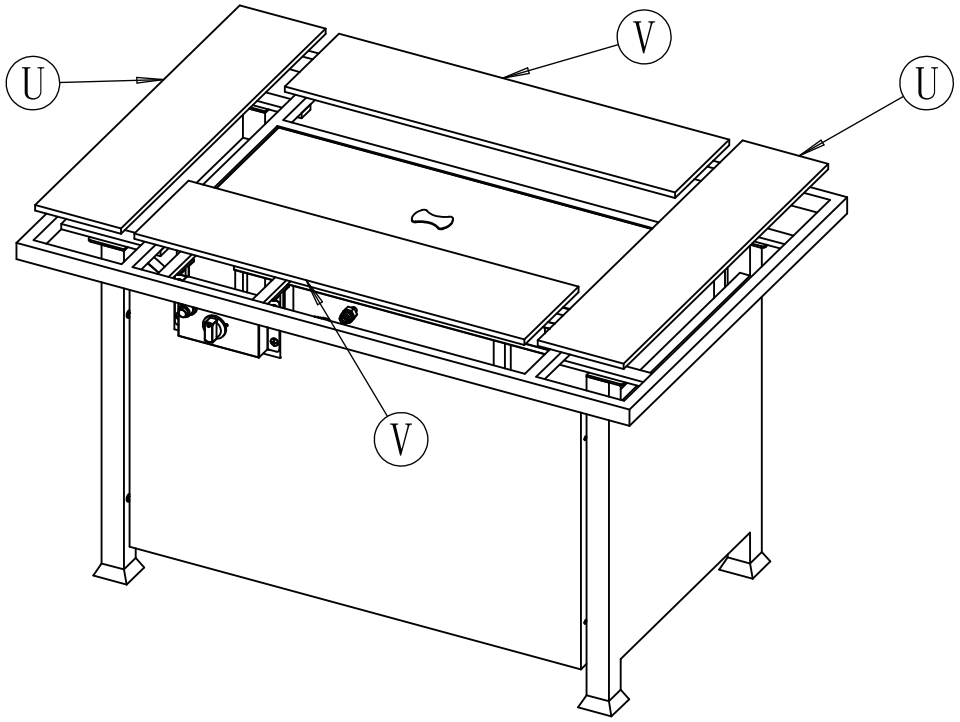


24


JJ*4PCS
KK*4PCS

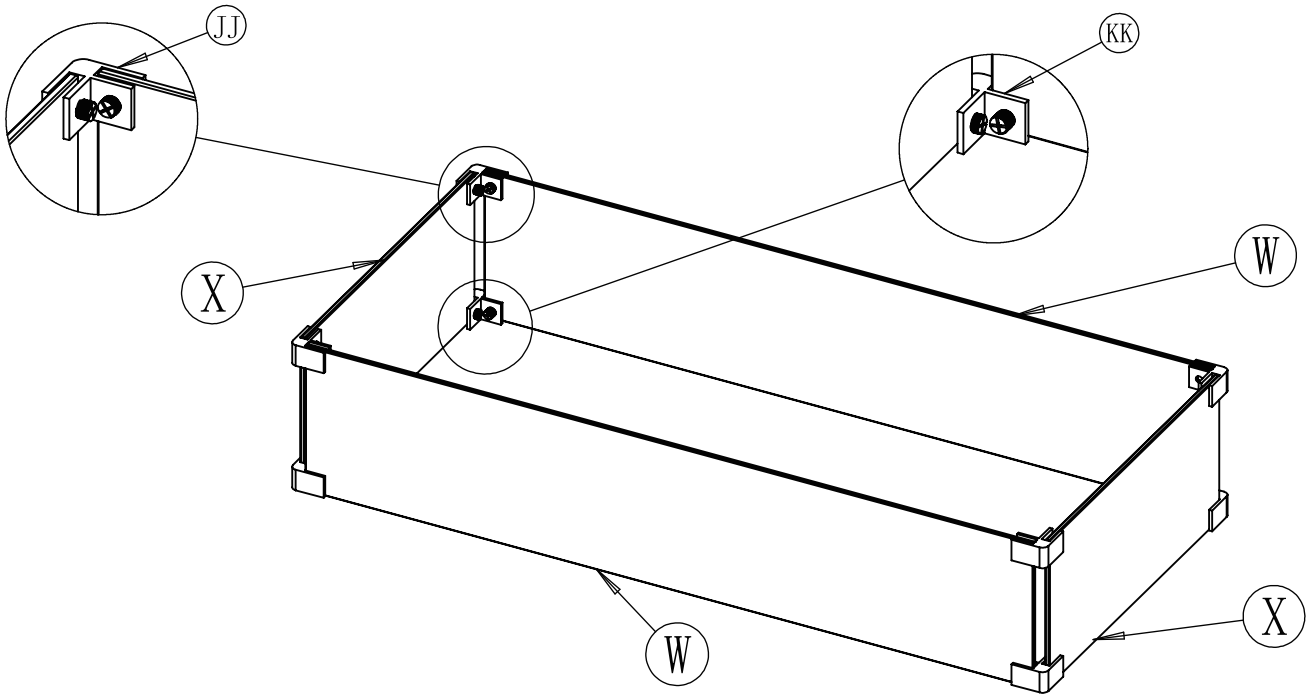

25

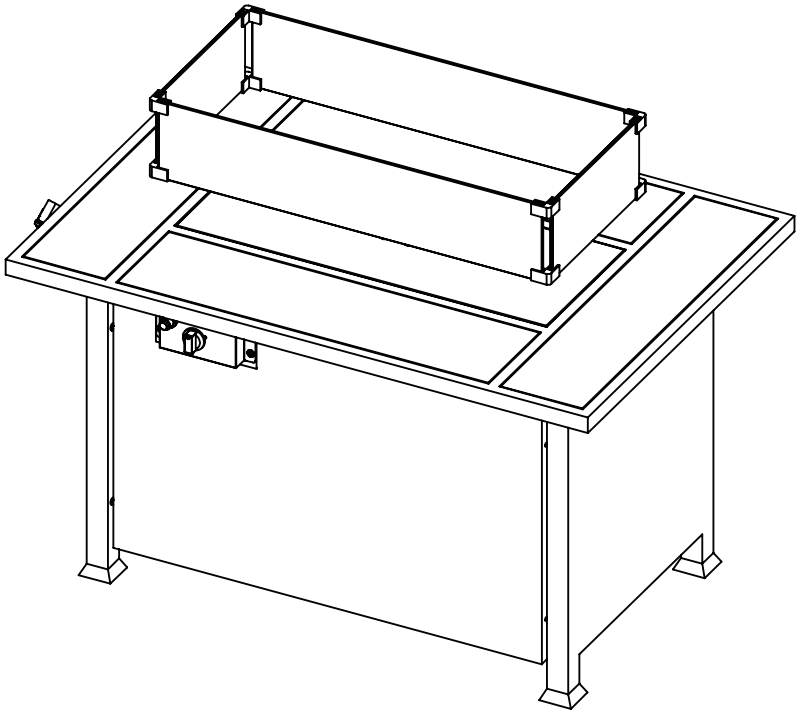


Done

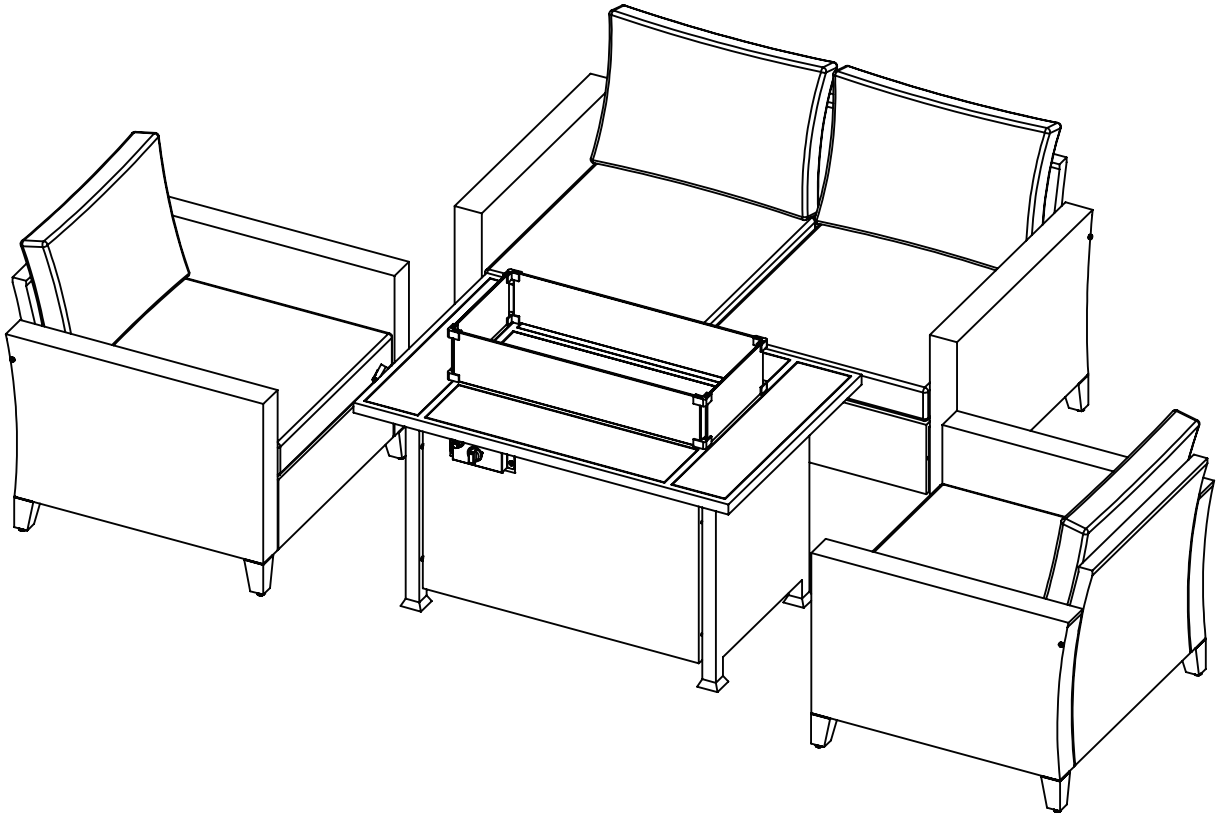

SAFETY WARNINGS

⚠ WARNING:
-Do not modify the appliance;
-Do not move the appliance during use;
-Turn off the gas supply at the gas container after use
-Accessible parts may be very hot. Keep young children away
-The appliance should not be used in basements or below ground level.
-The appliance must only be used for space heating.

⚠ **WARNING:**
THIS APPLIANCE HAS A NAKED FLAME; A SUITABLE GUARD SHOULD BE USED FOR THE PROTECTION OFYOUNG CHILDREN, THE ELDERLY AND THE INFIRM.

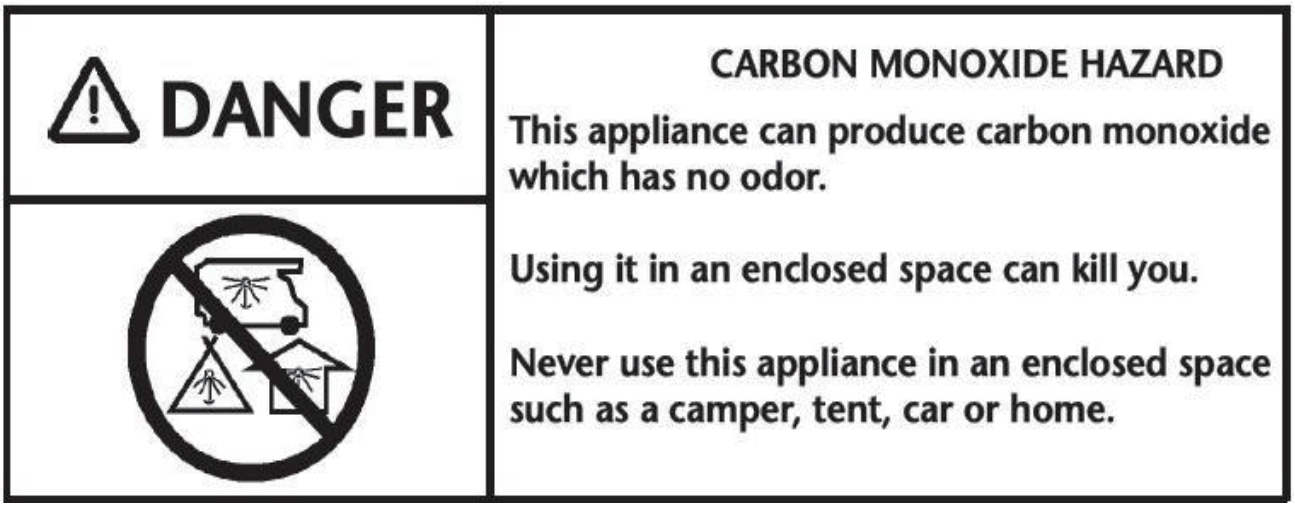

ATTENTION: This appliance is fitted with flexible gas rubber pipe and clamps that must be used; never use different kind and always according to the National Rules in force of the country of destination.

These components should be periodically substituted, according to the date reported on the body of each of them, or according to the National Rules in force of the country of destination.

Gas regulator and LPG cylinder are not included and have to be bought according to LPG compartment shape and cylinder support.

⚠ **WARNING:**
Failure to heed the Dangers, Warnings and cautions contained in this Owner's Manual may results in a serious explosion causing damage to property, bodily injury.

GENERAL WARNINGS
FOR OUTDOOR USE ONLY
Warning -For your safety

- If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.
- **IMPORTANT NOTICE:** read and understand all warnings and precautions prior to assembly and use for your built in burner.
- **DANGER: Failure to follow the dangers, warning and cautions in this manual may cause a fire or explosion causing damage to property, serious bodily injury or death.**
- Minimum Clearance From Unit To Combustible Material:

  72" (182.9cm) from the top; 36" (91.5cm) from all sides and back.

  Do not locate this appliance under over-head unprotected combustible surfaces.

  IF YOU SMELL GAS:

  1.Shut off gas supply to the burner.

  2.Extinguish any open flame.

  3.Do not try lighting any appliance.

  4.Do not touch any electrical switch nor use any phone in your building.

  5.Immediately call your gas supplier from a neighbor's phone.

  6.Follow the gas supplier's instructions.

  7.If you cannot reach your gas supplier, call the fire department.
- Never Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage. Read the installation, operation and maintenance instructions thoroughly before installing or servicing this equipment.
- Keep these instructions for future reference. If you are assembling this unit for some-one else, give this manual to him or her to read and keep for future reference.
- This gas fireplace should ONLY be used outdoors in a well-ventilated space and should NOT be used inside a building, garage, or any other enclosed area.
- Do NOT use this outdoor gas burner for indoor heating. TOXIC carbon monoxide fumes can accumulate and cause asphyxiation.
- Never LEAVE this gas burner unattended when in use.
- Children and adults should be alerted to the hazards of high surface temperatures and kept at a safe distance while fireplace is in use.
- Do NOT operate light or use this burner system within 8 feet of walls, structures or building.
- Storage of this burner system indoors is permissible only if it has been disconnected from its fuel supply (LP gas cylinder).
- Gloves are strictly recommended to be used while moving this appliance, to protect your hands.
- Any sealed parts by Manufacture or his agent cannot be altered by the user
- Do not store or use gasoline or other flammable vapors and liquids within 25 feet (7.62m) of this or any other appliance.
- Do NOT store any combustible materials in the base enclosure.
- The use of alcohol, prescription or non-prescription drugs may impair an individual's ability to properly

assemble or safely operate this burner system.

- Do not use in an explosive atmosphere. Keep gas burner system area clear and free from combustible materials, gasoline and other flammable vapors and liquids.
- This outdoor burner system is NOT to be operated by children. Young children should be closely supervised when in the vicinity of this outdoor burner system.
- This outdoor burner system is not to be installed or used in or on recreation vehicles and/or boats.
- Always use in accordance with all applicable local, state and national codes. Contact your local fire department for details on outdoor fires.
- Use the same precautions you would with any open fire with this outdoor burner system.
- Do NOT burn solid fuels such as: wood, charcoal briquettes, lump charcoal, manufactured logs, driftwood, trash, leaves, paper, cardboard, plywood, painted or stained or pressure treated wood in this outdoor burner system.
- Do NOT alter this outdoor fireplace in any manner.
- Do NOT use this outdoor burner system until it is COMPLETELY assembled and all parts are securely fastened and tightened.
- Do NOT store another LP gas tank within 10 feet (3.05 m) of this outdoor burner system while it is in operation.
- Do NOT use this outdoor burner system near automobiles, trucks, vans or recreational vehicles.
- Do NOT use this outdoor burner system under any overhead or near any unprotected combustible materials. Avoid using near or under overhanging trees and shrubs.
- Always use this outdoor burner system on a hard, level, non-combustible surface such a concrete, rock or stone. An asphalt or blacktop surface may not be acceptable for this purpose.
- Do NOT use this outdoor burner system if any part has been under water. Immediately call a qualified service technician to inspect the burner system and to replace any part or control system and any gas control which has been under water.
- Do NOT wear flammable or loose clothing when operating this outdoor burner system.
- Do NOT use in windy conditions.
- Keep all electrical cords away from a hot outdoor burner system.
- Certain areas of this outdoor burner system will become too hot to touch during and after use. Do not touch hot surfaces until the unit has cooled unless you are wearing protective gear such as insulated pot holders or heat resistant gloves or mittens to avoid burns.
- Children and adults should be alerted to the hazards of high surface temperatures and should stay away to avoid burns or clothing ignition.
- Do NOT hang or place clothing or other flammable materials on or near the gas burner system.
- Any guard or other protective device removed for servicing the burner system must be re-placed prior to operation.
- Do NOT attempt to move or store this outdoor burner system until all parts are cool.
- Do NOT lean over this outdoor burner system when lighting or when in use.
- Use only the regulator and hose assembly provided. Use only replacement regulator and hose assemblies specified by the manufacturer.
- Storage of this outdoor burner system indoors is permissible only if the tank is discon-nected, removed from

the outdoor burner system and properly stored outdoors.

- Do not attempt to disconnect the gas regulator from the tank or any gas fitting while the outdoor burne system is in use.
- Always shut off gas supply at the tank valve and disconnect regulator from the tank when the burner system is not in use.
- Do NOT sit on the mantle when the unit is in operation.
- Do not throw anything onto the fire when the unit is in operation.
- Lava rocks are very hot; please keep children or pets away at a safe distance.
- It is essential to keep the outdoor burner system valve compartment, burners, and circulating air passages clean. Inspect outdoor burner system for debris before each use.
- Prior to each gas burner system operation, check the hose for evidence of excessive abrasion or wear by looking through the visual check hole. If the hose is damaged, cut or cracked, it must be replaced before using the gas burner system. The hose assembly can only be replaced by a hose assembly specified by the manufacturer.
- Before each use, remove the lava rocks. Examine the burner and its components. If dirty, clean with a soft brush and soapy water solution. Also examine the area around the burner. Any dirt or foreign material, such as spider webs or nests in this area should be removed. If it is evident that the burner is damaged, it must be replaced be-fore the gas burner system is used.
- The burner assembly can only be replaced by a burner specified by the manufacturer. Place the hose out of the pathways where people may trip over it.
- Do Not cross the hose between outdoor burner system and the propane tank.
- **WARNING: When the national conditions require it, it's necessary to change the flexible tube.**

GAS (LPG) WARNINGS

- LP gas is flammable and hazardous if handled improperly. Please review the characteristics before using any LP gas product.
- Propane Characteristics:
- Flammable, explosive under pressure, heavier than air, and settles in pools in low areas. In its natural state, propane has no odor. For your safety, an odorant is typically added. Contact with propane could burn the skin.
- Propane is extremely flammable and hazardous if handled improperly.

LP GAS WARNINGS:

- Cylinders must be stored outdoors in a well-ventilated area out of reach of children.
- Disconnected cylinders must have threaded valve plugs tightly installed and must
- not be in a building, garage or any other enclosed area.
- Never use a propane cylinder with a damaged body, valve, collar or footing.
- Dented or rusted propane cylinders may be hazardous and should be checked by your propane gas supplier.
- LP gas tank must be arranged for vapour withdrawal.
- The LP gas tank must have a tank collar to protect the tank valve.
- Never use an LP gas tank with a damaged body, valve, collar, or footing. Dented or rusted LP gas tanks may be hazardous and should be checked by your LP gas supplier prior to use.
- The LP gas tank should not be dropped or handled roughly.
- Tanks must be stored outdoors out of the reach of children. Do NOT store in a building, garage, or any other enclosed area.
- Never store your LP gas tank where temperatures can reach over 125°F.
- Do not store the LP gas cylinder in direct sunlight or near a source of heat or combustion.
- Never keep a filled LP gas tank in a hot car or car trunk. Heat will cause the gas pressure to increase, which may open the relief valve and allow gas to escape.
- Place dust cap on valve outlet whenever the LP gas tank is not in use. Only install the type of dust cap on the LP gas tank valve outlet that is provided with the LP gas tank valve. Other types of caps or plugs may result in leakage of propane.
- Do not store a spare LP gas cylinder under or near this appliance.
- Never fill the LP gas cylinder beyond 80% full.
- If the information in (a) and (b) is not followed exactly, a fire causing death or serious injury may occur.
- LP gas cylinders should be filled only by a certified LP gas dealer.
- the pressure regulator is set for 28-30mbar
- Regulator outlet pressure is 28~30mbar
- Never attempt to attach this appliance to the self-contained LP gas system of a camper trailer, motor home or house.
- Always use the pressure regulator and hose assembly provided with the appliance to connect to a LP gas cylinder. Never connect to an unregulated LP gas supply.
- Contact your retailer’s customer service department for replacement parts.

- Hand turn the manual gas control valve. Never use tools. If the valve will not turn by hand, do not try to repair it. Call a certified gas technician. The use of force or any self-attempted repair may result in a fire or explosion.
- Use only the type of gas and the type of LPG cylinder specified by the manufacturer.
- Appliance is fitted with gas regulator, flexible gas rubber pipe and clamps according to the National Rules in force of the country of destination.
- Appliance must use an approved gas regulator (approved for a working temperature not lower than 50 ˚C) according to the EN Standard (see minimum, nominal and maximum pressure - gas regulator inlet and outlet connection according to the National Rules in force) and flexible gas hose according to EN Standard (with proper inner diameter according to gas inlet connection and National Rules in force) with a length not over 1.5 m and approved for a working temperature not lower than 60 ˚C. When substitution will be necessary, you have to purchase suitable gas regulator, flexible gas rubber pipe and clamps from your local gas dealer; gas regulator should be substituted not over 10 years.
- Flexible gas rubber pipe must be carefully, avoiding any twisting. Never use a damaged gas regulator.
- Never connect this appliance to an unregulated LPG source (gas regulator is mandatory to be used).
- When the appliance is not in use, turn the LPG cylinder in “OFF” position.
- Always perform a leakage test on gas connections whenever a LPG cylinder is connected. If bubbles form in Flexible gas rubber pipe must be located in the LPG compartment carefully, avoiding any twisting.
- Never use a damaged gas regulator.
- Always perform a leakage test on gas connections whenever a LPG cylinder is connected. If bubbles form in the leakage test solution, do not use it. Never use a flame to test for leakages. **It is strictly forbidden and dangerous!**




1 “Maximum diameter or breadth:305mm.
2 “Maximum height (regulator included):390mm.

WARNING

（1）Do not obstruct the ventilation holes of the cylinder housing;
（2）Close the gas supply at the valve of the gas cylinder or the regulator after use;
（3）In the event of gas leakage, the appliance shall not be used or if alight, the gas supply shall be shut off and the appliance shall be investigated and rectified before it is used again;
（4）Checking the tubing or the flexible hose (at least once per month and each time the cylinder is changed). If it shows signs of cracking, splitting or other deterioration it shall be exchanged for new hose of the same length and of the equivalent quality;
（5）This appliance must be installed and the gas cylinder stored in accordance with the regulations in force;
（6）Do not move the appliance when in operation;
（7）Shut off the valve at the gas cylinder or the regulator before moving the appliance;
（8）The tubing or the flexible hose must be changed within the prescribed intervals;
（9）Use only the type of gas and the type of cylinder specified by the manufacturer;
（10）In case of violent wind particular attention must be taken against tilting of the appliance;

This appliance shall be used ONLY outdoors in a well- ventilated space and shall NOT be used inside a building, garage, or any other enclosed area.
1) For use outdoors or in amply ventilated areas.
2) An amply ventilated area must have a minimum of 25% of the surface area open.
3) The surface area is the sum of the walls surface.

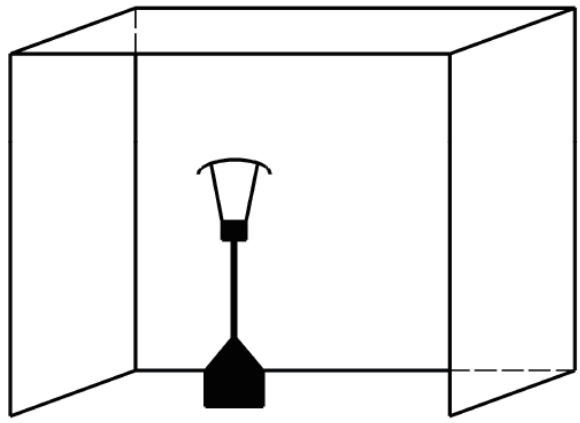

CE 0063 24 PIN NO:0335DR3500	ModelNo:860-335 (HY1051)	
Appliance	I 3+(28-30/37)	
Gas type/Gas Pressure	G30 Butane at 28-30mb	G31 Propane at 37mbar
Heat input	14.65 kW (1373g/h)	14.65 kW (1147g/h)
Injector Size	1.94mm	
Destination	BE, FR, IT, LU, IE, GB, GR, PT, ES, CY, CZ, LT, CH, SI, LV, TR	
Manufacturer Name:	JINHUA HAOYEE LEISURE PRODUCTS CO.,LTD	
Manufacturer's address:	Dongshan Street No.15,Tangxi Town, Wucheng District, Jinhua City, Zhejiang Province, China	

Read the instructions before use ***FOR OUTDOOR USE ONLY***

Caution

-This appliance is intended for decorative purposes.

-Accessible parts may be very hot. keep young children away.

-This appliance must be installed in accordance with such regulations as are in force.

-After use turn off the appliance at the cylinder valve;

-This appliace requires a hose and regulator which are defined in the instruction.

LIGHTING INSTRUCTIONS:

1.Read operating instructions before lighting.

2.Control knob must be in " OFF " position.

3.Make sure the fuel supply is properly connected and open at t he source/tank.(See owner's Manual).

4.Push and hold igniter button to create sparks .

5.While holding the igniter button,push and turn control knob to the "Low" position to light the pilot.

6.Keep Burner Control Knob preseed in for 15-30 seconds after ignition.

7.If ignition does not occur in 30 seconds,push and turn burner control knob to " OFF",
wait 5 minutes,fan with newspaper or magazine,and repeat lighting procedure.

8.If ignite does not light burner,use a long match or a long butane lighter.

9.Adjust flame to desired flame with the control knob.

CAUTION:The gas supply must be turned of f at the gas source when the appliance is not in use.

TURNING OFF

1.Turn and push the control knobs clockwise to the "OFF " position.

2.Turn the cylinder valve off at the gas cylinder.

FOR SAFE OPERTATION

1.Ensure fireplace is not resting on the gas hose and there are no kinks in the hose.

2.Ensure gas valve,thermocouple, burner ignition area and burner orifices are cle ar of any debris.

WARNING NOT TO BE USED FOR THE HEATING OF DOMESTIC PREMISES .

WARNING that the appliance shall not be used in basements or below ground level .

WARNING THIS APPLIANCE HAS A NAKED FLAME. A SUITABLE GUARD SHOULD BE USED FOR THE PROTECTION OF YOUNG CHILDREN,THE ELDERLY AND THE INFIRM.

OPERATING INSTRUCTIONS


Lighting

- Make sure the burner system is stable and in solid state .
- Remove the protective cover.
- Press the control button fully until you hear a slight ticking sound (this is the piezo ignition). If you hear nothing when pressing the ignition button, then you probably need to replace the battery. Hold the control knob pushed in when you open the gas supply. Turn the control knob to the right for gas supply. The burner should now ignite within 15 seconds . If the burner gives a completely flame, you hold the control knob for 15 seconds withheld . The flame continues to burn .Extinguishes the flame, try this again and hold the button longer retained . .

LEAKAGE TESTING

Never check for gas leakages with a flame or while smoking.
This appliance needs to be periodically checked for leakages and an immediate check is required if the smell of gas is detected.

- Make a soap solution using 1 part of liquid dish-washing soap to 3 parts water. The soap solution can be applied with a soap bottle, brush, or rag to the leakage tested points shown in the figure beside.
- The valve of the LPG cylinder should be in the “OFF” position at this point of the leakage test. Once the soapy solution is applied to the gas connections, the valve of the LPG cylinder needs to be turned to the “ON” position.
- Soap bubbles will begin to form in the soapy solution if any leakage is present.
- In the event of gas leakage, the appliance shall not be used or if alight, the gas supply shall be shut-off and the appliance shall be investigated and rectified before it is used again. Tighten any leaking fittings, then turn on gas supply and recheck.
- If necessary, substitute gasket (according to EN 549 Class B2) or material used to guarantee tightness (according to EN 751-1 Class I).

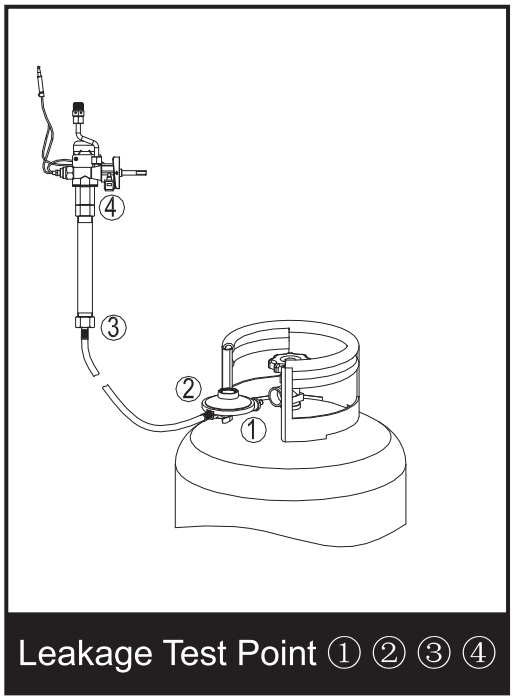

Leakage Test Point ① ② ③ ④

MAINTENANCE AND CLEANING

To enjoy years of outstanding performance from your appliance, regular services of the appliance is mandatory as followings:

- The appliance should be inspected before at least one time a year by a Qualified Service only. More frequent cleaning may be required according to the use of the appliance.
- Any guard or other protective device removed for servicing the appliance must be replaced before operating it.
- Keep exterior surfaces clean, free and clear from combustible materials.
- Use warm soapy water for cleaning. Never use flammable or corrosive cleaning agents.
- While washing your unit makes sure to keep the area around the burner assembly dry at all times. If the gas control is exposed to water in any way, ***DO NOT*** tries to use it. It must be replaced.
- Burner and LPG compartment circulating air passageways of the appliance must be kept clean.
- Airflow must be unobstructed. Keep controls, burner and circulation air passageways clean. Signs of possible blockage include:
- Gas odor with extreme yellow tipping of flame / Appliance glow is excessively uneven / Appliance makes popping noises.
- Spiders and insects can nest in burner or orifices. This dangerous condition can damage the appliance and render it unsafe for use. Clean burner holes by using a heavy duty pipe cleaner. Compressed air may help clear away smaller particles.
- Carbon deposits may create a fire hazard. If any carbon deposits develop, clean dome and engine with warm soapy water.
- After the burner and lava rocks are completely cooled down, remove it from the bowl and use a soft brush to get rid of the mild stains, loose dirt and soil. Wipe with a soft cloth.
- Clean the bowl and afterward put lava rocks again in proper position.
- For proper cleaning, a vacuum cleaner can be used.

Note: In a salt-air environment (such as near the sea), corrosion occurs more quickly than normal. Frequently check the corroded areas and repair them promptly. Stubborn stains, discoloration and possibly rust pitting can occur from exposure to harsh outdoor conditions. Be careful not let any powder or solvent come in contact with painted or plastic components as damage may occur.

After long use, some discoloration can come up and it screen is normal.

Make sure both gas supplies is in OFF position before changing battery. Please refer to the process of assembling battery.

Please contact the Manufacturer or dealer for information regarding replacement hoses, thermocouples, igniters, lava rocks, etc.

Attention: Never use unauthorized parts or component for this appliance.

Use only original equipment replacement spare parts and components.

Otherwise may void the warranty of this product and result in a hazardous condition.

STORAGE (after use)

Turn control knob in “OFF” position (full disk).

Turn LPG cylinder in “OFF” position.

Store the appliance in a cool dry place away from direct sunlight; store it upright in an area sheltered from direct contact with inclement weather (such as rain, sleet, hail, snow, dust and debris).

If desired, cover to protect exterior surfaces and to prevent build up in air passages.

Note: Wait until appliance is cool before covering.

During periods of extended inactivity or when transporting:

Turn control knob in “OFF” position (full disk).

Disconnect LPG cylinder and move to a secure, well ventilated location outdoors. DO NOT store in a location that will exceed 50 °C.

Store appliance upright in an area sheltered from direct contact with inclement weather (such as rain, sleet, hail, snow, dust and debris).

If desired, cover appliance to protect exterior surfaces and to prevent build up in air passages.

Note: Wait until appliance is cool before covering.

TROUBLESHOOTING

Problem:	Condition:	Solution suggested:
Burner won't light	Control knob is not in Maximum position (big flame).	Turn control knob in Maximum position (big flame).
	LPG cylinder valve is closed / Empty.	Open the valve / Replace LPG cylinder with a new one.
	Blockage in the injector.	Clean or replace injector.
	Air in the gas circuit.	Open gas line and bleed it (pressing control knob in) for not over 1 minute or until you smell gas.
	Low gas pressure.	Replace LPG cylinder with a new one.
	Igniter fails.	Use match to light burner; change battery or obtain new ignite and replace it.
Burner won't stay lit	Dirty build up around burner.	Clean dirty around the burner.
	Low flames or not full running around the burner.	Flame spreader holes partially closed; clean the burner.
	Thermocouple is not operating correctly.	Replace thermocouple (FSD).
	Low Gas pressure.	Replace LPG cylinder with a new one.
Burner flame is low Note: Do not operate appliance below 5 ˚C	Outdoor temperature is greater than 5 ˚C and LPG cylinder is less than 25 % full.	Replace LPG cylinder with a new one.
	Gas pipe is bent or kinked.	Straighten hose and perform leakage test on gas pipe.
	Control knob is fully Maximum position (big flame).	Turn control knob to"OFF" position (full disk), let cool to room temperature and check burner and orifices for blockage.
Carbon build-up	Dirty or film on burner.	Clean burner.
Flash back (flame inside burner)	Burner ports are blocked.	Switch OFF the appliance. Close LPG cylinder valve. Wait 2 minutes, following the ignition procedure. Ignite burner. If problem continuous, switch-off. Contact your dealer.
Thick black smoke	Blockage in the burner.	Turn control knob to "OFF" position, let the appliance to cool at room temperature and remove blockage and clean burner inside and outside.

US

If you have any questions, please contact our customer care center, Our contact details are below:

001-877-644-9366

customerservice@aosom.com

Imported by Aosom LLC
27150 SW Kinsman Rd Wilsonville, OR 97070 USA
MADE IN CHINA

CA

If you have any questions, please contact our customer care center, Our contact details are below:

416-792-6088

customerservice@aosom.ca

Imported by Aosom Canada Inc.
7270 Woodbine Avenue, Unit 307, Markham,
Ontario Canada L3R 4B9
MADE IN CHINA

Si vous avez la moindre question, veuillez contacter notre centre d'assistance à la clientèle,Nos coordonnées sont les suivantes:

416-792-6088

customerservice@aosom.ca

Importé par Aosom Canada Inc.
7270 Woodbine Avenue, unité 307,
Markham, Ontario Canada L3R 4B9
FABRIQUÉ EN CHINE

UK

If you have any questions, please contact our customer care center, Our contact details are below:

0044-800-240-4004

enquiries@mhstar.co.uk

IMPORTER ADDRESS:
MH STAR UK LTD
Unit 27, Perivale Park,
Horsenden lane South
Perivale, UB6 7RH
MADE IN CHINA

DE

Wenn Sie Fragen haben, wenden Sie sich bitte an unser Kundendienstzentrum,Unsere Kontaktdaten stehen unten:

+49 40 87408465

service@aosom.de

ADRESSE DES IMPORTEURE/REP:
MH Handel GmbH
Wendenstraße 309
D-20537 Hamburg
Germany
IN CHINA HERGESTELLT

IT

In caso di dubbio, si prega di contattare il nostro centro assistenza clienti,I nostri dettagli di contatto sono di seguito:

0039-0249471447

clienti@aosom.it

IMPORTATO DA/REP:
AOSOM Italy srl
Centro Direzionale Milanofiori
Strada 1 Palazzo F1
20057 Assago (MI)
P.I.: 08567220960
FATTO IN CINA

ES

Si tiene alguna pregunta, comuníquese con nuestro Centro de Atención al Cliente,Nuestros datos de contacto son los siguientes:

0034-931294512

atencioncliente@aosom.es

IMPORTADOR/ REP:
SPANISH AOSOM, S.L.
C/ROC GROS,Nº15.08550, ELS HOSTALETS DE BALENYÀ, SPAIN.
B66295775
HECHO EN CHINA

Se tiver alguma dúvida, por favor contacte o nosso Centro de Atendimento ao Cliente,Os nossos dados de contacto são os seguintes:

0034-931294512

info@aosom.pt.

IMPORTADOR/REP:
SPANISH AOSOM, S.L
C.ROC GROS N.15, 08550. ELS HOSTALETS DE BALENYÀ
FEITO NA CHINA

FR

Si vous avez la moindre question, veuillez contacter notre centre d'assistance à la clientèle,Nos coordonnées sont les suivantes:

0033-1-84166106

aosom@mhfrance.fr

Importé par/ REP:
MH FRANCE
2 Rue Maurice Hartmann
92130 Issy Les Moulineaux
France
FABRIQUÉ EN CHINE





Adresses sur quefairedemesdechets.fr