
IN221000418V01_UK

853-026

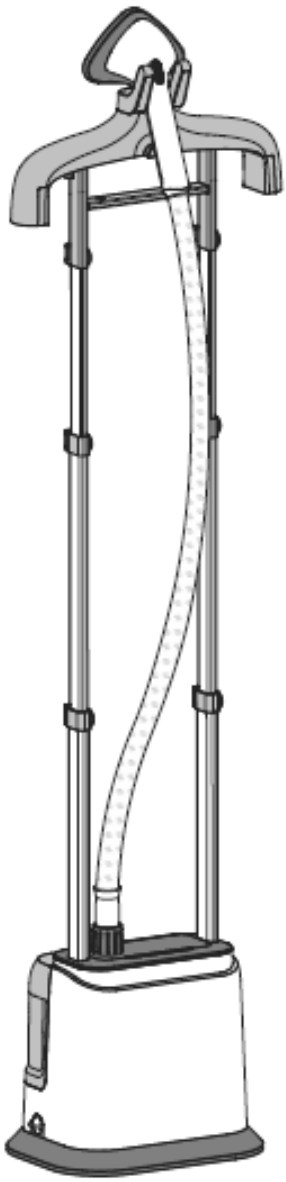

Fabric Steamer

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

ASSEMBLY INSTRUCTION

Security matters

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards.

   Children shall not play with the appliance.
2. Cleaning and user maintenance shall not be made by children without supervision
3. Please make sure the appliance working on 30m leakage switching power supply.
4. Please unplug the power plug when repairing, cleaning heater inside the dirty.
5. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
6. Do not pull the power plug and should seize it from the socket in the pull-out. Never submerge the appliance into water or other liquid.
7. Don't leave when the appliance is working. Keep the children and people who can not take care of themselves away from the appliance.
8. Don't add hot water in the water tank, otherwise it will be deformed.
9. Avoid being scalded, please pulled out and inserted the steam tube after the appliance completely cool down.
10. After use, cut off the power, poured rest water after waiting for the appliance to completely to cool down.
11. Do not fill the water tank with cleaning solution, etc.
12. Advice to use pure water.
13. During the use of this appliance, magnetic valve (steam release valve) automatically turn off when the tank water is empty. In order to avoid danger, if you want to continue to add water for using, please turn off steam switch.
14. The appliance has to be unplugged after use and before cleaning or user maintenance of the appliance.
15. Care should be taken when using the appliance due to the emission of steam.
16. Unplugging the appliance during filling and cleaning.
17. The fabric steamer is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
18. Keep the fabric steamer and its cord out of reach of children less than 8 years of age when it is energized or cooling down.

Protection System

1. Thermostat:

It can cut off the power supply when the boiler with water shortage. So it can make sure appliance safety by maintaining the temperature at a set temperature inside.

2. Thermal Link:


When the thermostat is damaged or failed, thermal fuse will cut off the power supply to ensure safety.

Warning


1. Do not use the appliance away from home.
2. Please cut off the power when you are using a variety of removable attachment.
3. Please according to the instruction to make installation.


Installation


Take out the appliance from the gift box and spread the power cord

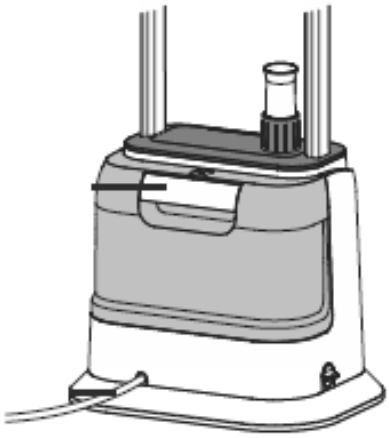



Take out the supporting bar (figure); Drag it to the appropriate location. At the same time, Tighten up the supporting bar. Insert the supporting bar to the right hole of appliance, then locking it.

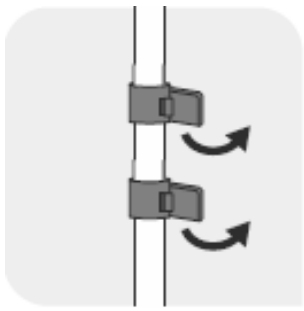

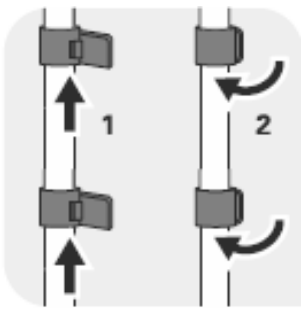

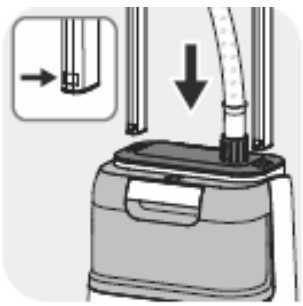

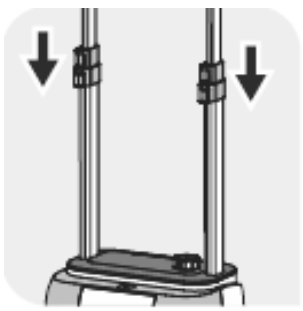

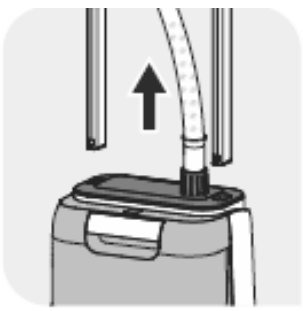


Installation

Insert the hanger into the top of supporting bar, then tighten and fixed it well.



At last, hang the brush on the hanger.
The way of demolish is opposite, please operating the appliance under the status without steam.

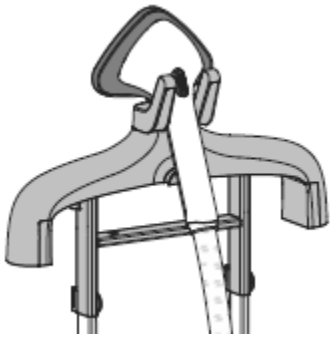


Use

Take out the water tank and open the cap, then add water (advice to use pure water) finally, place the water tank flatly in the appliance.



Insert the plug to the suitable power socket

After insert the power plug, then turn on the switch on control panel. let the machine preheat for about 40s, the steam will be out.

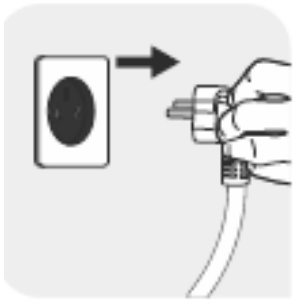



You can control the machine by the handle switch.



Put your clothes on the clothes-rack. (other clothes-rack can be hanged on the hanger)

Steam sprayed by turning on switch, according to the requirements for pressing needs

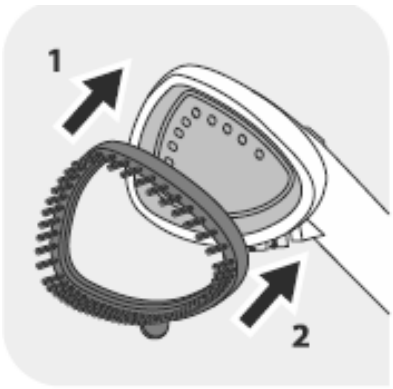

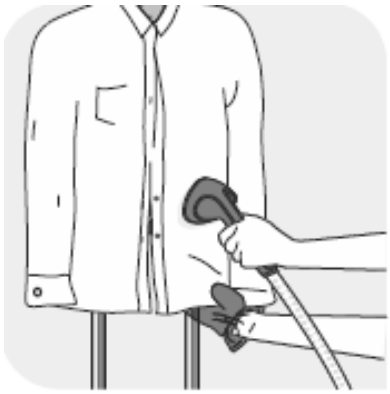

Parameter

Model: 853-026
Total power (W): 1650-1960W
Voltage (V): 220-240V ~
Frequency (Hz): 50/60Hz

Maintenance

According to the functions of various series of fabric steamer, in order to increase its life-span, users must follow the daily maintenance and maintenance way.

1. Correctly use the product according to the instruction. After each use, cut off the power, put away the power plug and picked up the power cord.
2. After the appliance is completely cool down, pour rest water out of the water tank... Clean and dry the water tank then placed it on the base plate.
3. Spin off the multi-function plug in sequence. Use a cleaning cloth to clean and dry components of brush or spray.
4. Remove the hanger, clothes-rack, lifting bar. Then use a cleaning cloth to clean them and dry.
5. After every use, wait for the appliance to completely cool down, unscrew the release water nut and pour rest water out of the boiler. Then clean the boiler and dry.
6. Put all components which had been cleaned into the gift box in sequence. Then stored it in ventilated dry place.

Correct Disposal of this product	
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

If you have any questions, please contact our customer care center.
Our contact details are below:

0044-800-240-4004

enquiries@mhstar.co.uk

IMPORTER ADDRESS:
MH STAR UK LTD
Unit 27, Perivale Park,
Horsenden lane South
Perivale, UB6 7RH
MADE IN CHINA

Aosom